




UPGRADE YOUR SPACE

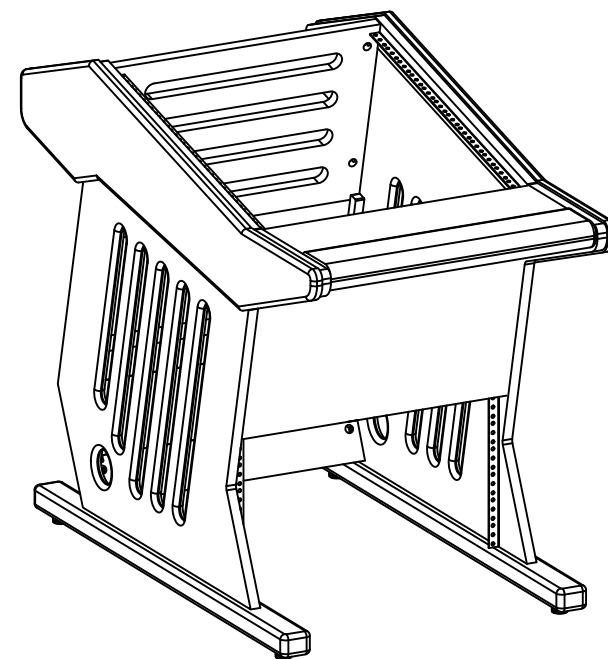


Maestro Solo

Assembly Manual

Assembly Manual

Unpack the parts carefully and set up so that you can see the part numbers clearly. In the big box you should find a small cardboard box with all the screws and bolts for assembly.

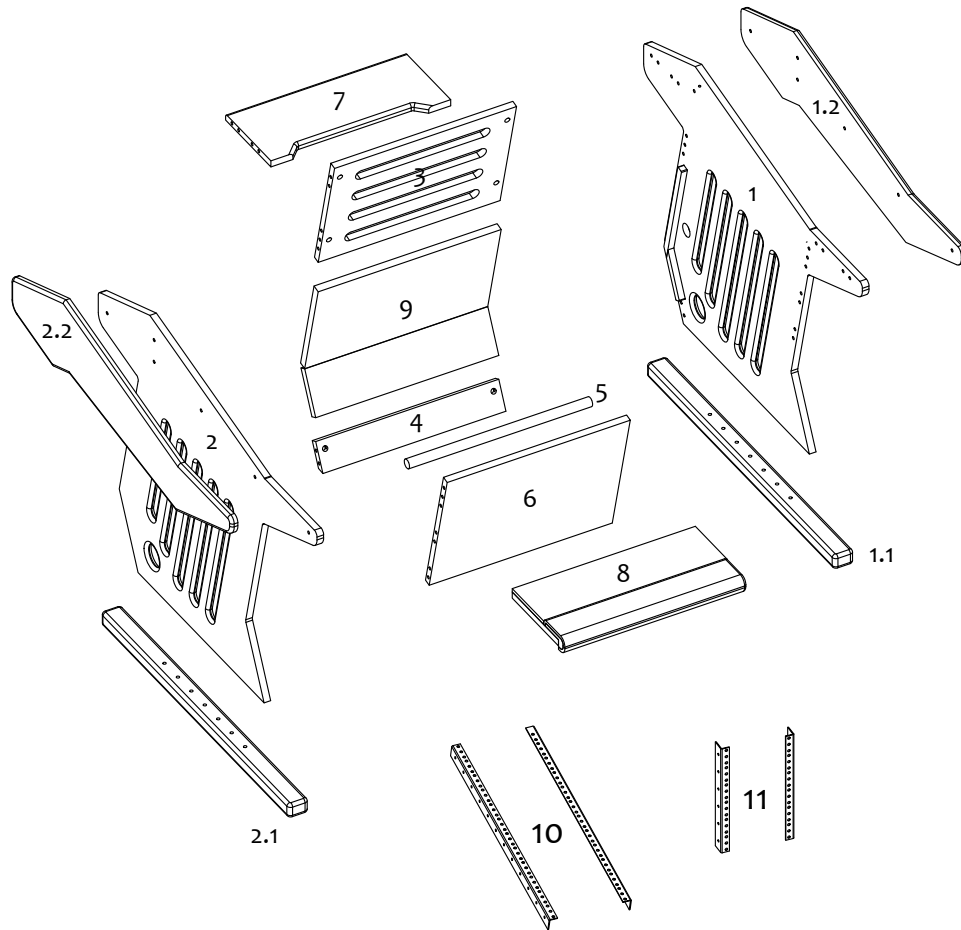

Here you have an exploded view of the whole desk and how it is supposed to come together. We use high quality furniture assembly components from renowned EU manufacturers. Please, never use force. These parts should come together easily, in case of doubt check the manual again or contact support.

Assembly Manual

Thanks for choosing a piece of furniture from Zaor. Before you can enjoy the use of it you need to build it. We tried to put all the explanations necessary for a safe build, when in doubt please get in touch or check out our Youtube channel where we are putting more and more assembly videos to help you with this important task. Enjoy!

General technique for putting together Zaor desks




The assembly of your desk uses special kits. Here's how to use them

1) On the piece with the threaded insert(s), put in the system bolt(s) and tighten making sure to align the hole in the system bolt at a 90° angle.

Please note that the system bolt may have a little slack in this position, which is fine!

2) Ensure that the hole in the bolt aligns with the opening in the other piece to be able to put in the safety screw.


3) In each hole in the second piece, put in a cone shaped safety screw and tighten with a cross screw driver - without forcing. The 2 parts will now be safely attached.

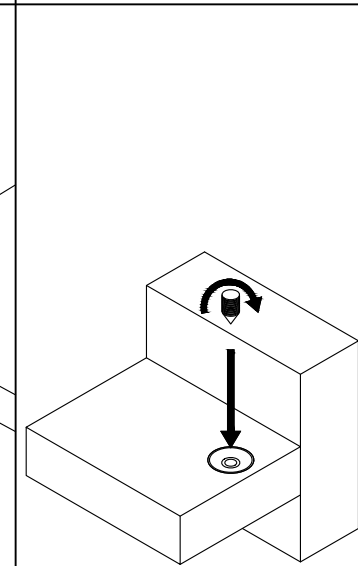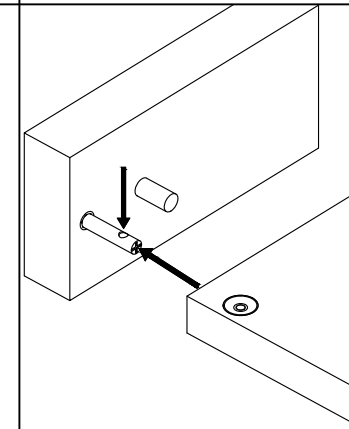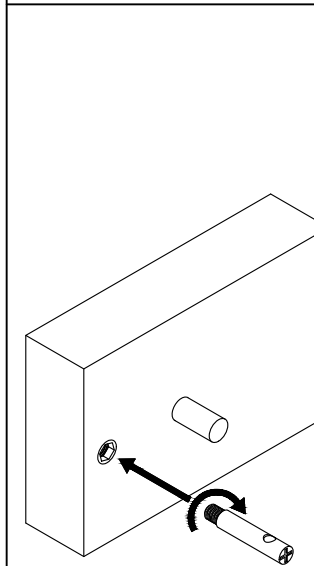



Assembly Manual

STEP 1

Push wooden dowels Type W in the appropriate holes

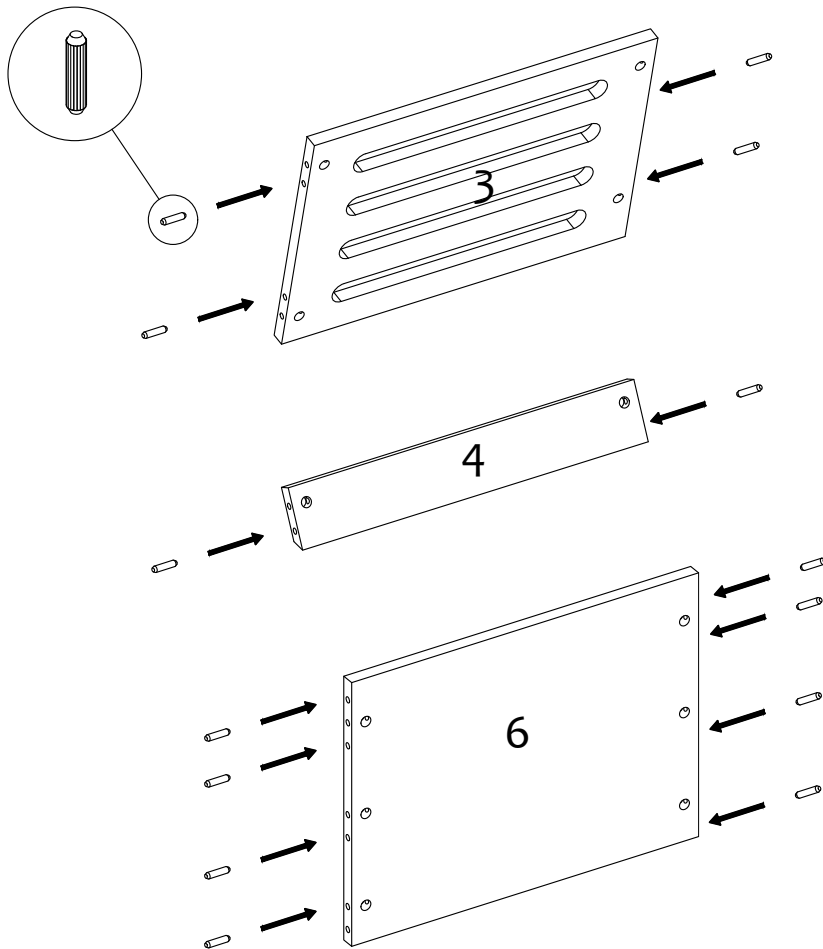


Assembly Manual

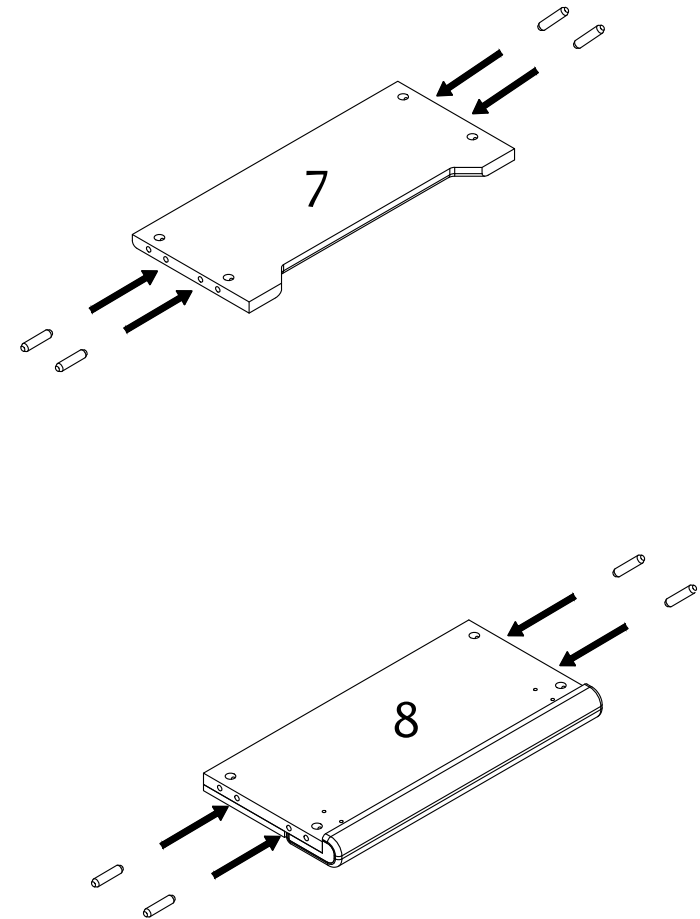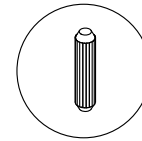

Assembly Manual



STEP 2

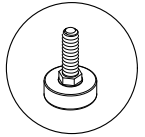

Type Ft




Type E

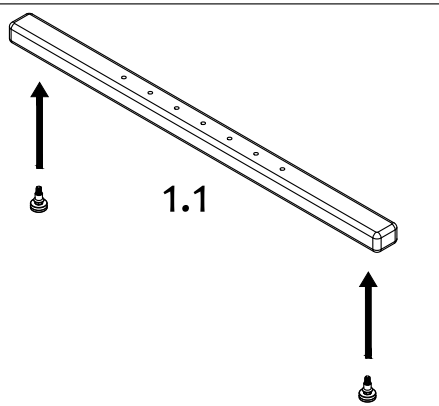
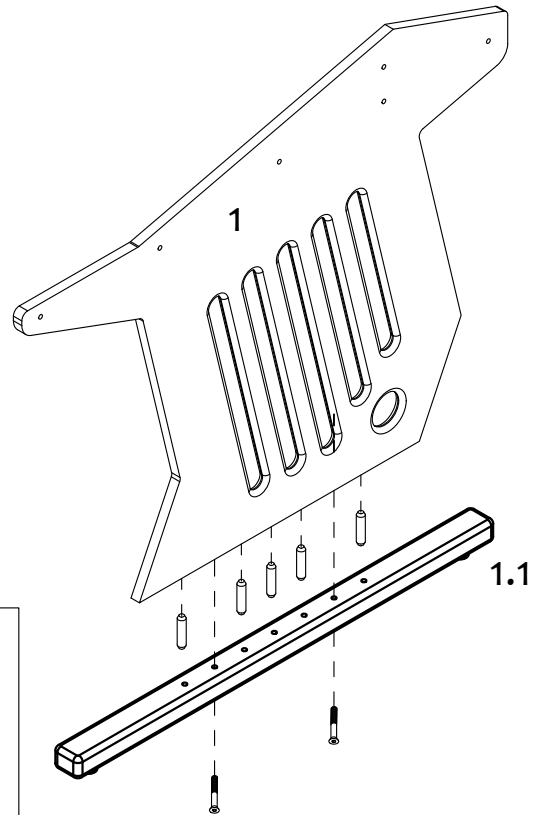


Assembly Manual


STEP 3

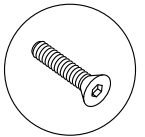

Type A

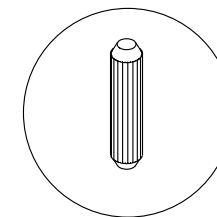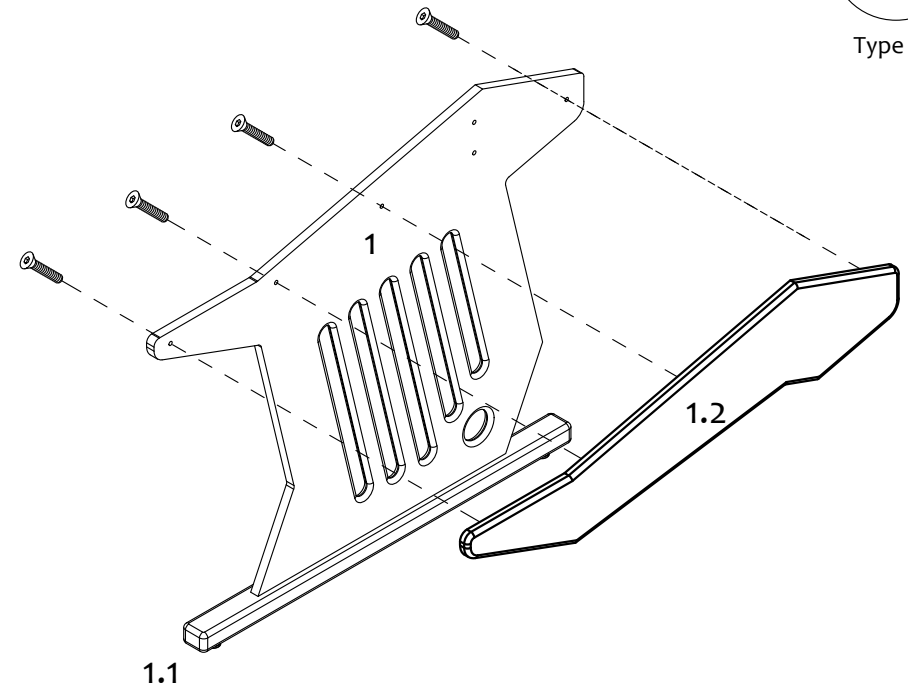


Type W20

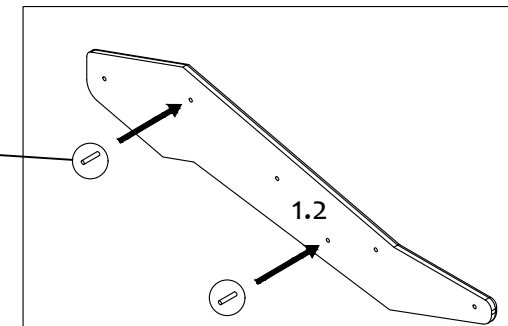

Assembly Manual



STEP 4

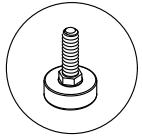

Type Ft




Type E

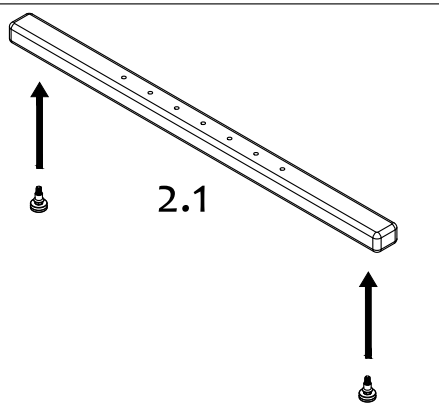
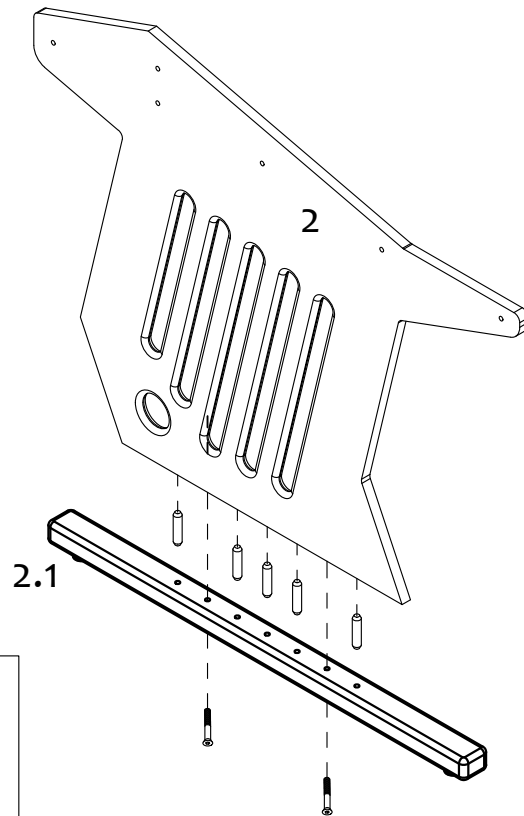


Assembly Manual


STEP 5

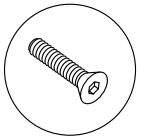

Type A

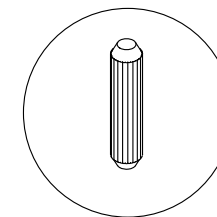
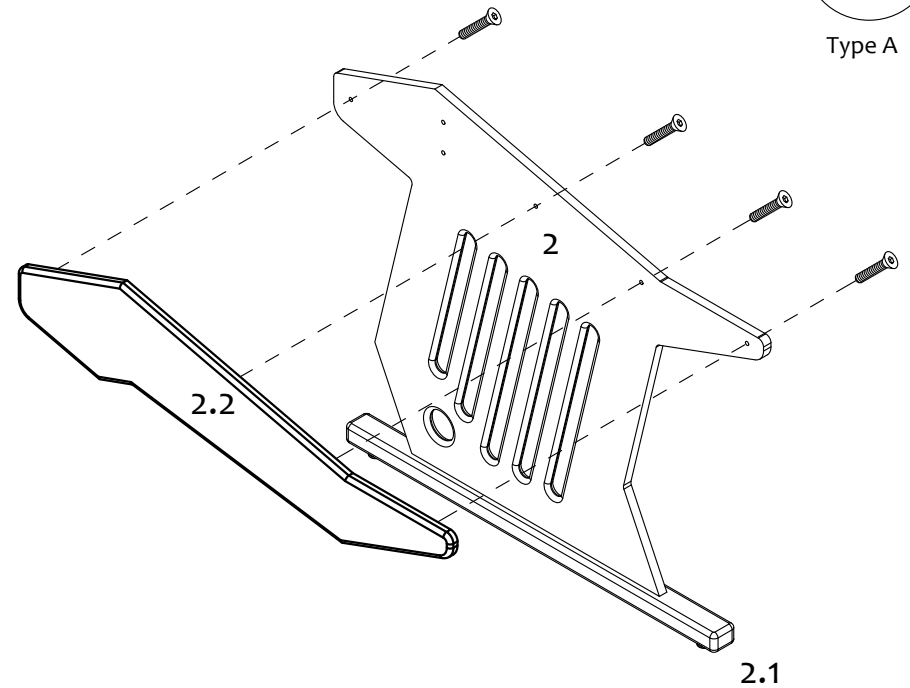


Type W20

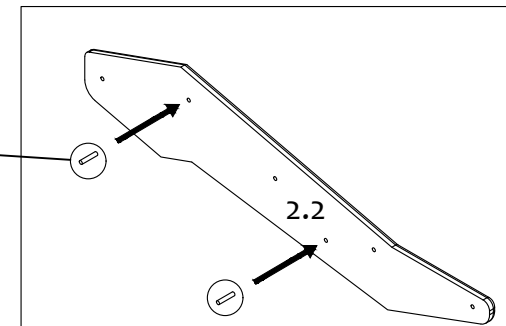



Assembly Manual

STEP 6

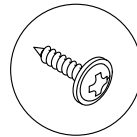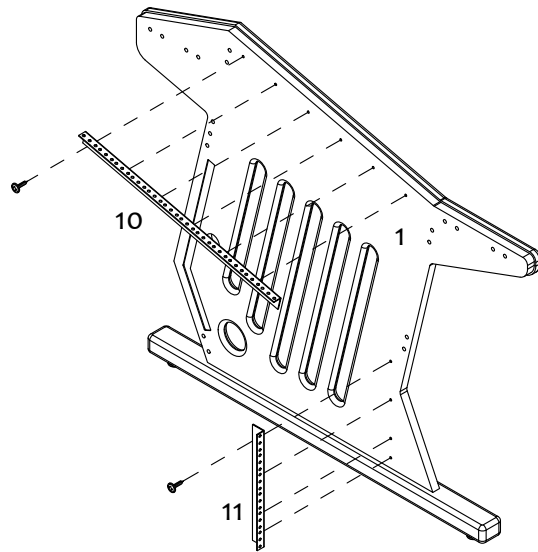

Type Rs


STEP 7

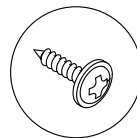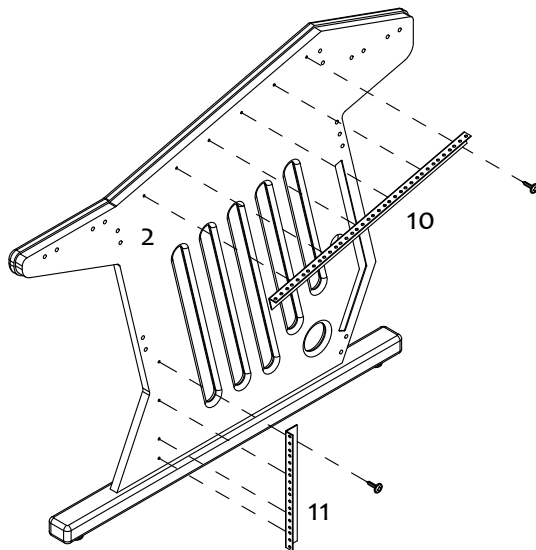


Type Rs

Assembly Manual

STEP 8

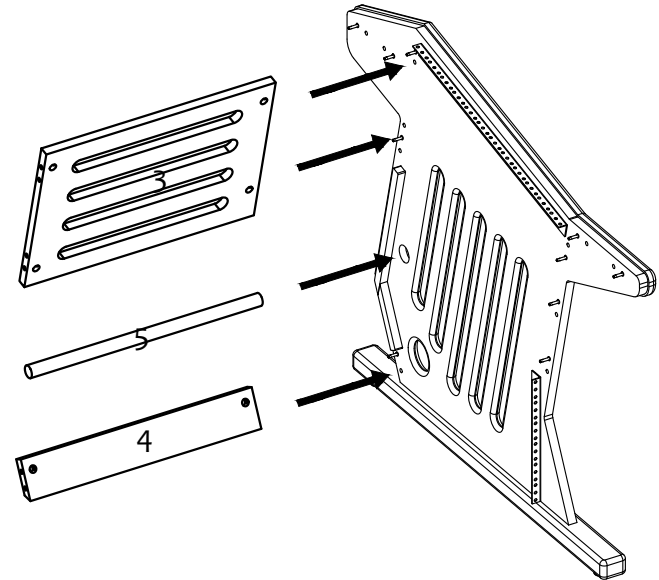


STEP 9

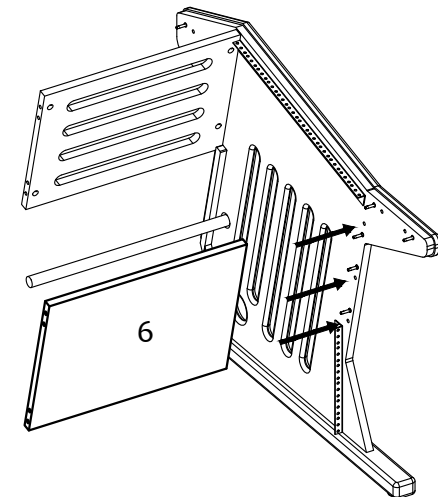


Assembly Manual

STEP 10

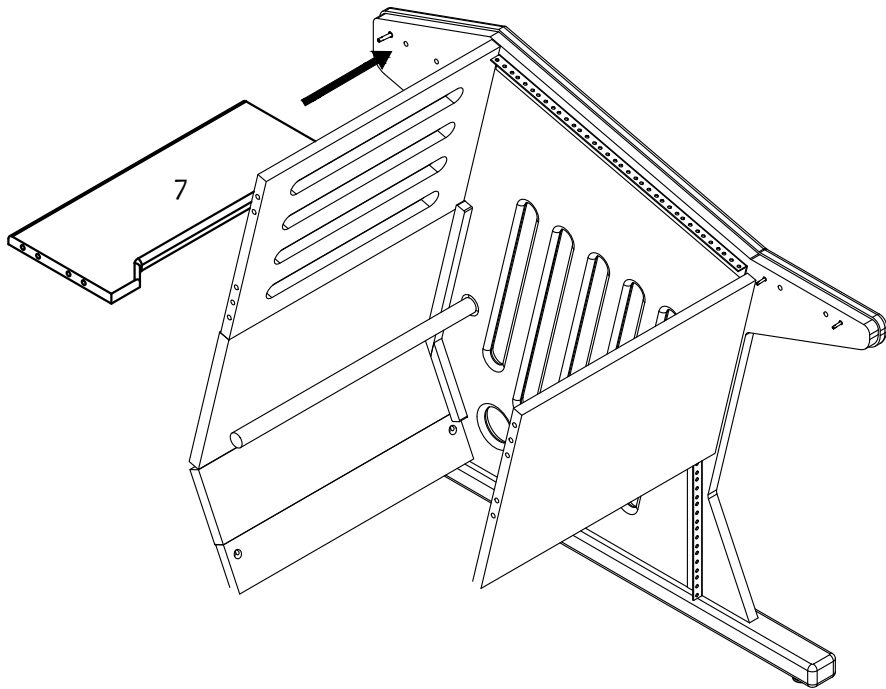


Assembly Manual

STEP 11

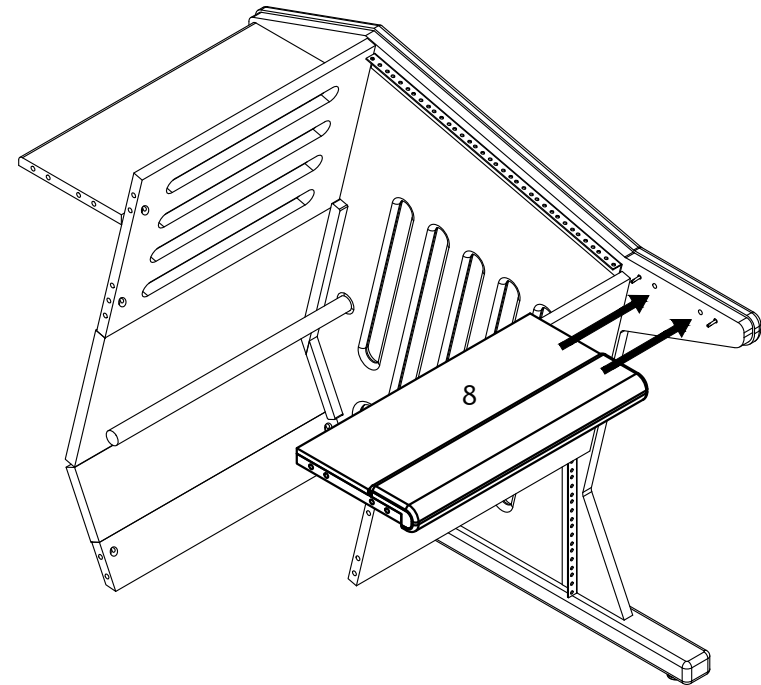


Assembly Manual

STEP 12

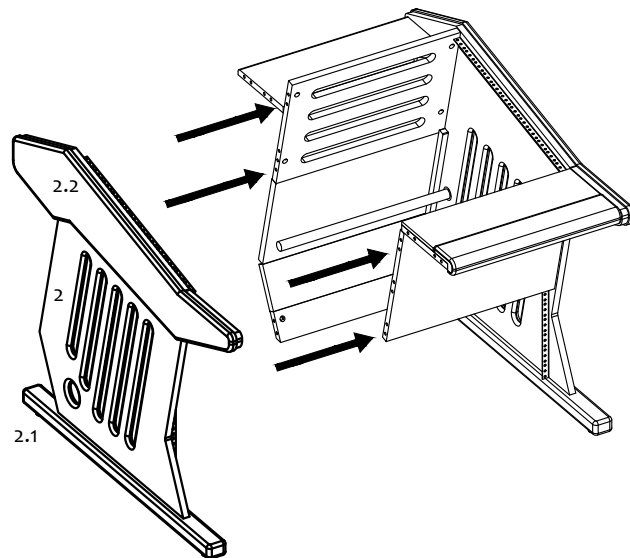


STEP 13

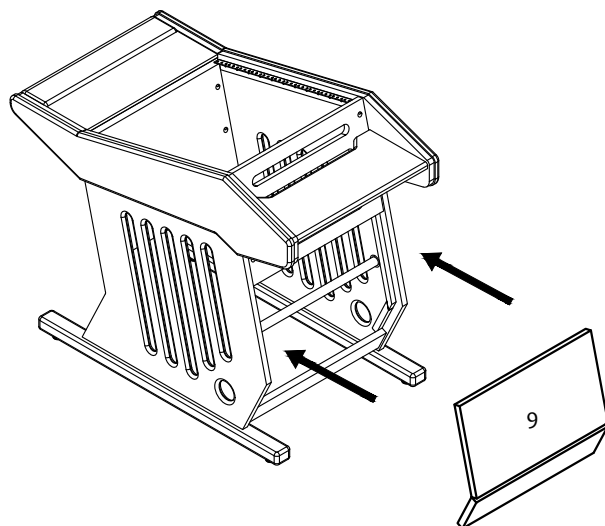

Assembly Manual

PACKING LIST:


x22



Assembly Kits

x32


Type **W**

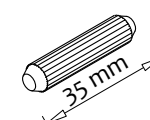

Wooden dowels

x08


Type **A**



m6x30 mm

x04


Type **E**



m6x60 mm

x04

Type **F**



Foot

x20


Type **Rs**



3.5x16 mm

x4

Type **W₂₀**



Wooden dowels

x1


Type **H**



Hex wrench

x72

Type **Ru**



Rack units screws

x2

Type **V**







Cable Straps

INSTRUCTION FOR USE AND CLEANING :

- clean with a soft cloth, slightly humid or specific products for wood or lacquer;

- avoid the use of abrasive cleaners.

TOOLS:

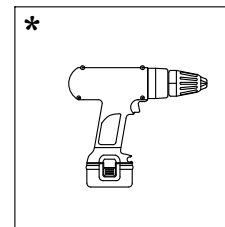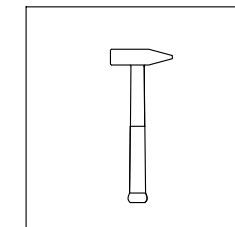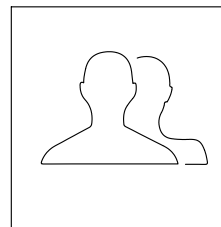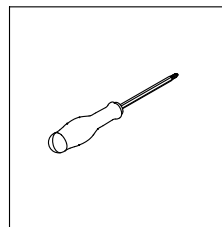

*Suggested