
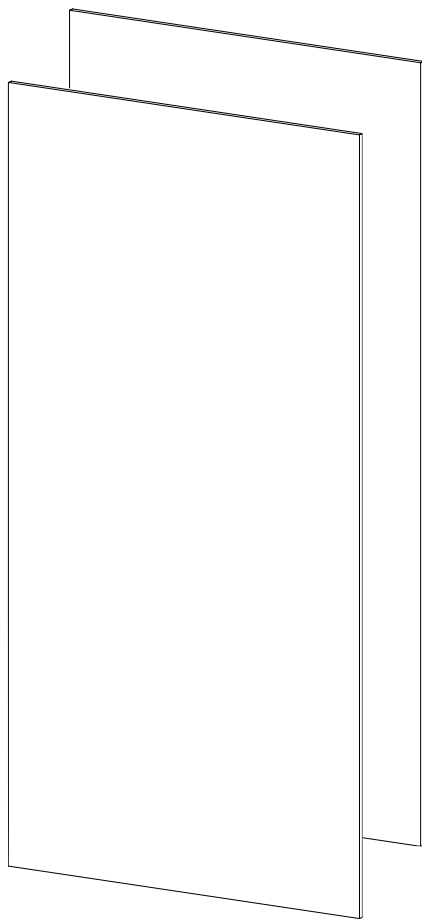


Flat Panel PET HD


Installation Manual

EN



MATERIAL NEEDED**Included**


Flat Panel PET HD 2800x1200x12mm

Not Included

Level






Measuring Tape



Flexi Glue Ultra







Velcro Stripes

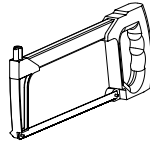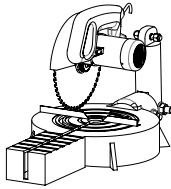

Cutting Tools


Before installing the panels, measure the wall where you are going to apply them. If necessary, make the necessary cuts to ensure a proper installation.

The cuts can be done as indicated below.

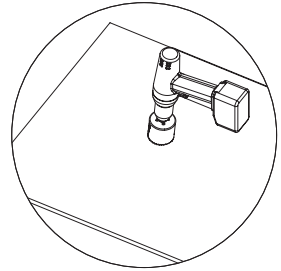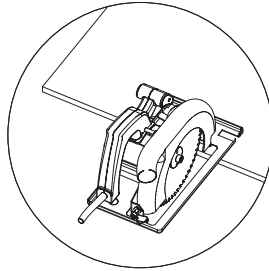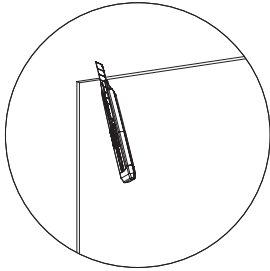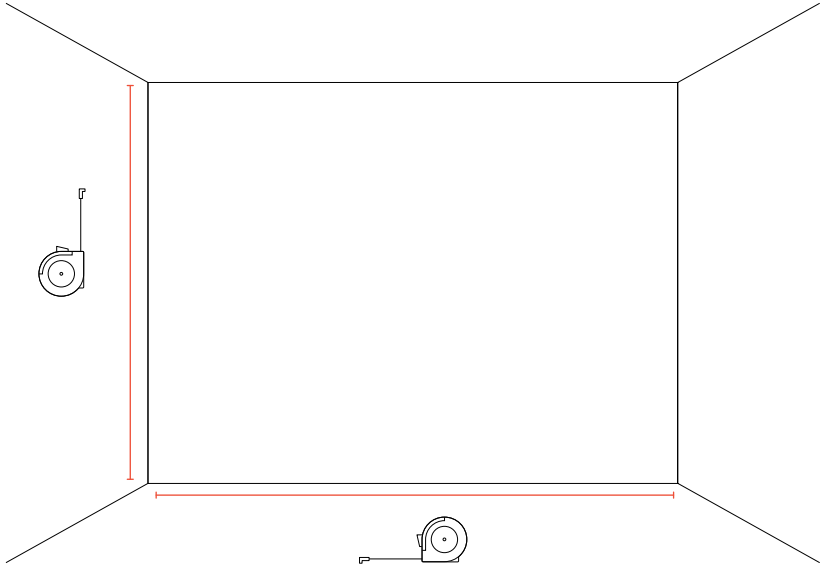


1

Apply Flexi Glue Ultra on the back of the acoustic panel, near the edges. Do not wait longer than 10 minutes after applying the glue to attach the panel to the wall.

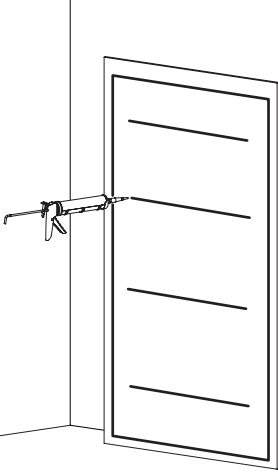**2**

Place the panel on the suitably chose position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

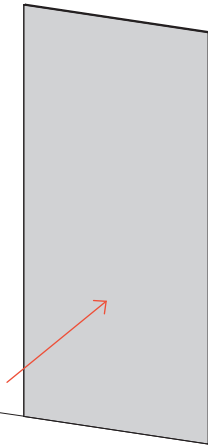
**!**

To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding


Full wall installation

1

Measure wall height in both sides. Take the smallest height.


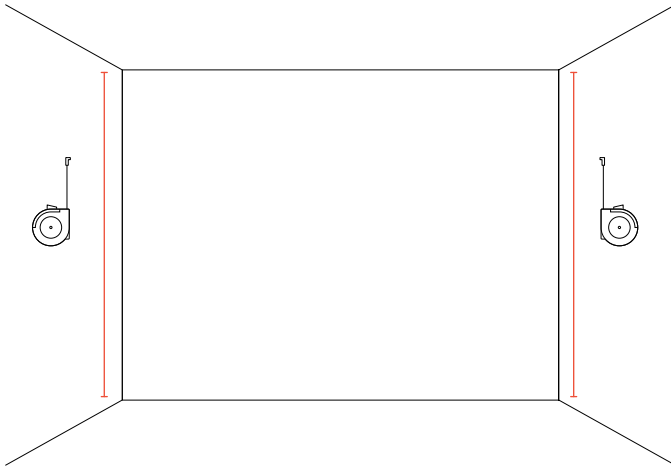
**2**

Based on the smallest height, calculate if it is necessary to cut one of the panels to fill the entire wall height.

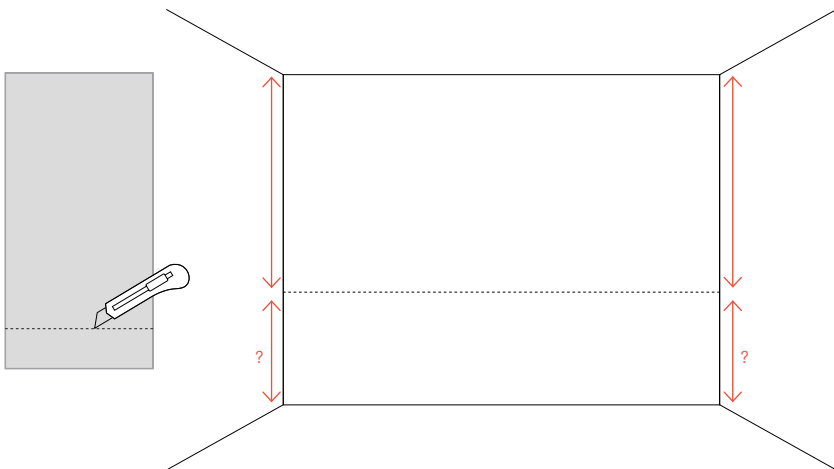

3

Glue the panels directly to the wall with Flexi Glue Ultra.

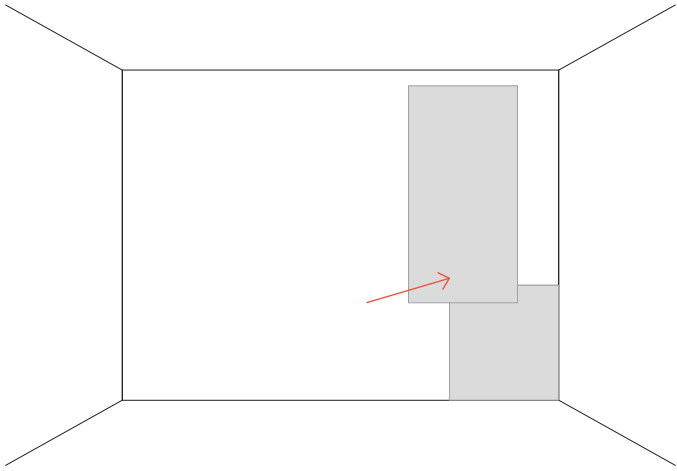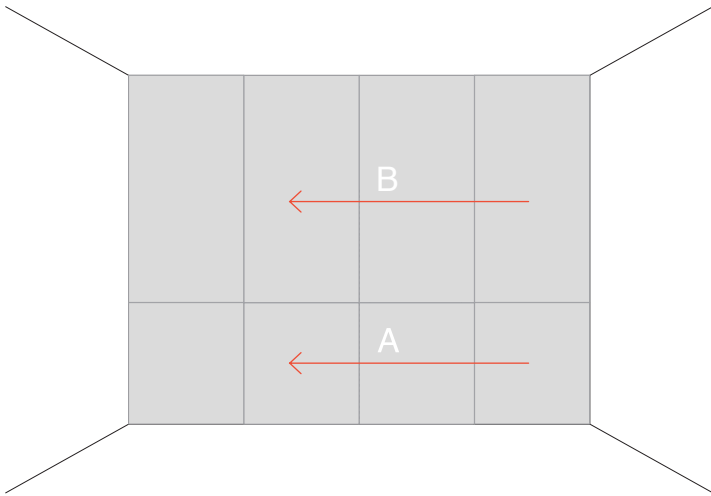**4**



Do not apply Flat Panel PET HD behind radiators or too close to a heat source.

Main Office, R&D & Logistics

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2023 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.