


Super Bass Extreme Ultra

Installation Manual


EN

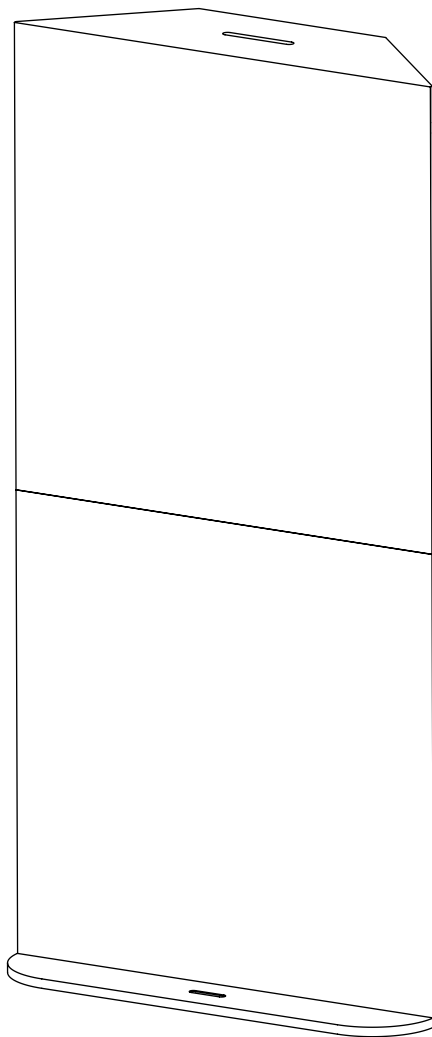

V/COUSTIC

✓ MATERIAL NEEDED

Included

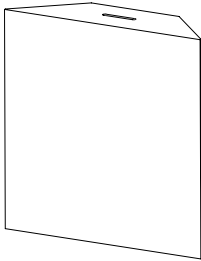


Super Bass Extreme Ultra




Felt Pads




Stacker



Gauge




Silicone Drop



VicFix J Profile 80mm | 3.14"

Not Included




Level




Drill



Wall Plugs and Screws



Super Bass Extreme Base x1




Flexi Glue Ultra







VicFix Suspension Profile 225 | 8.8"

Tower Assembly

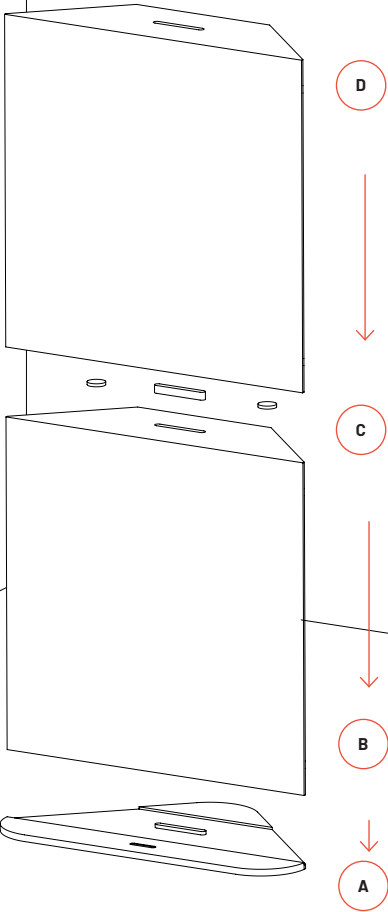


1


Step by step corner installation.

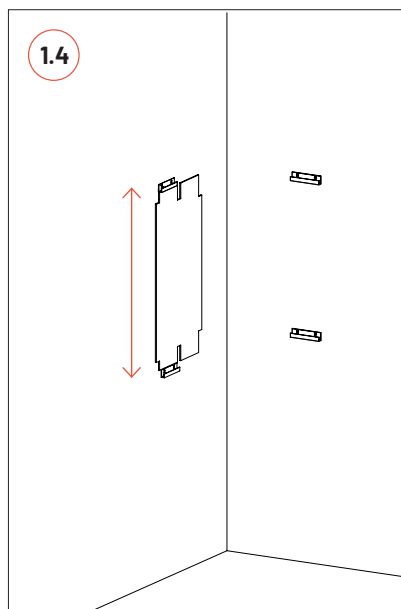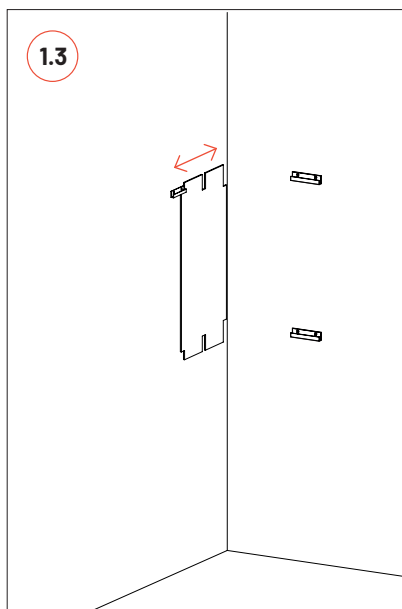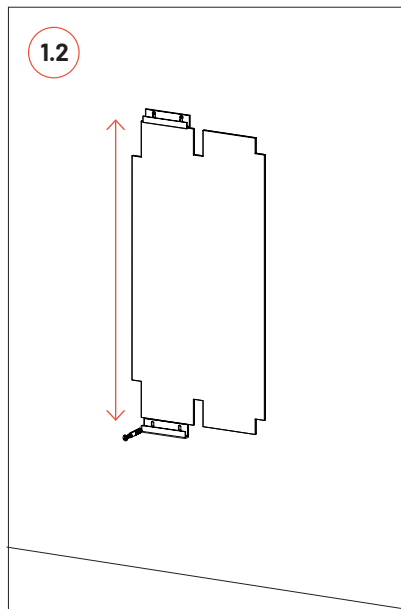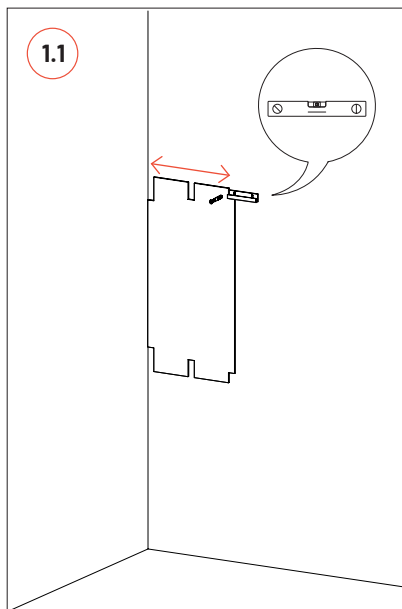

2

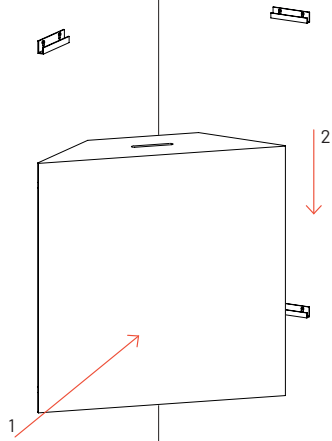


3

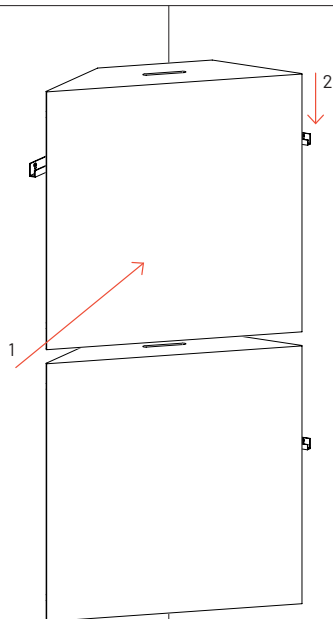


Ceiling Installation with VicFix J Profile 80mm

Note: A suspension accessory for the panel is available (**VicFix Suspension Profile 225mm**), specifically developed to simplify the installation of the super bass extreme between the ceiling and the wall. You can find this accessory in our catalog.

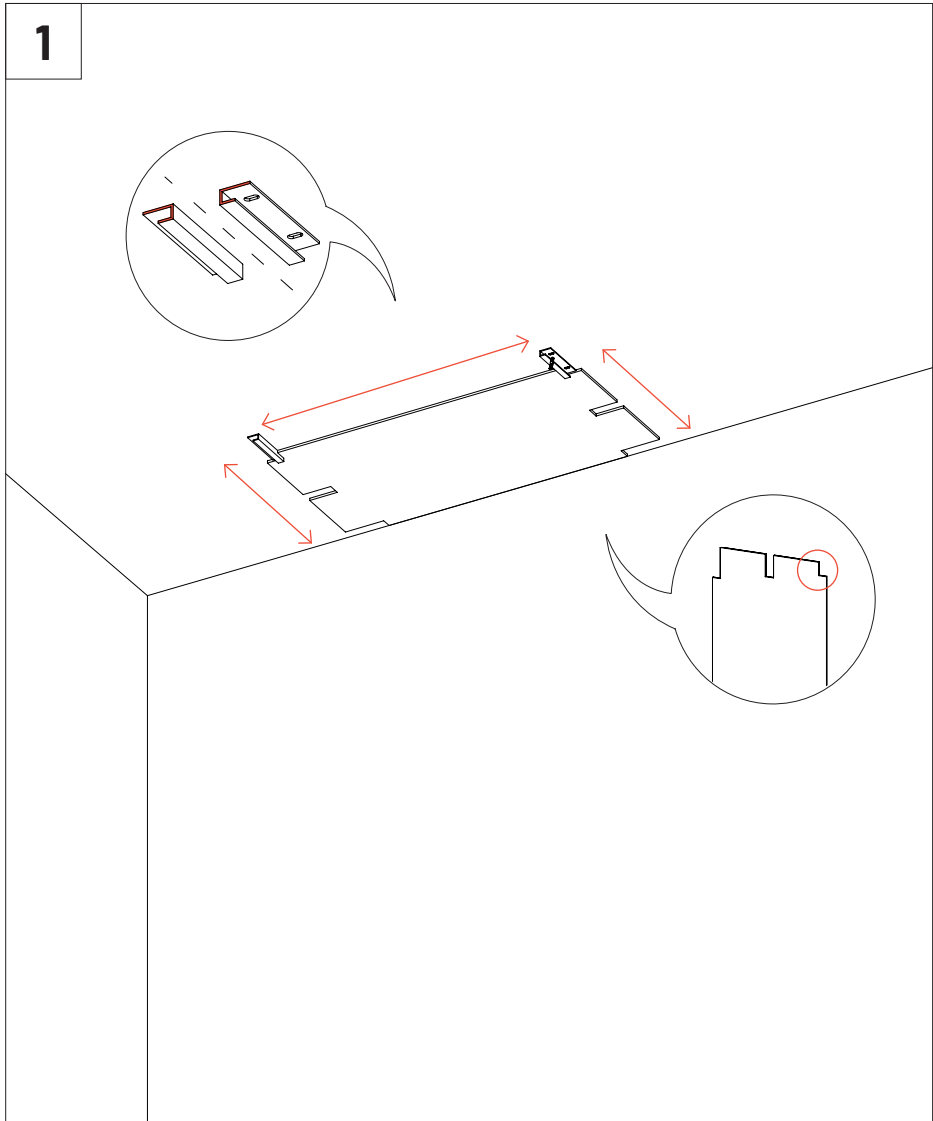

2

Apply Flexi Glue Ultra on the back of the bottom panel of the Super Bass Extreme Ultra, near the edges. Do not wait longer than 10 minutes after applying the glue to attach the panel to the wall. Place the panel on the suitably chose position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

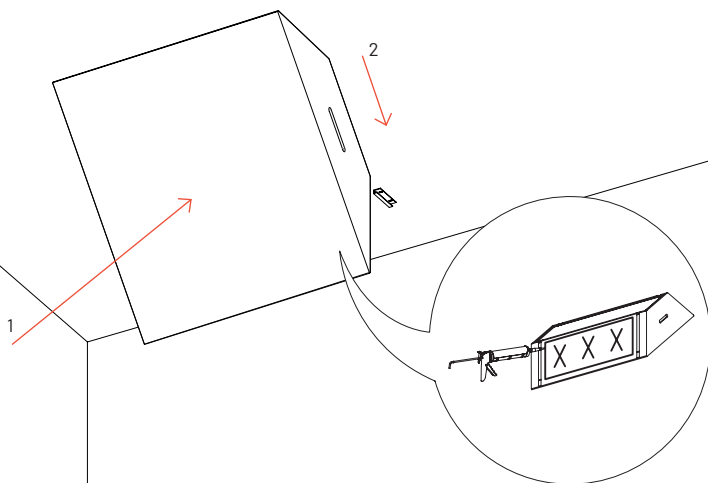**!**

Make sure that the ceiling where you are going to install the panels is prepared to support their weight.

Also make sure that the wall and ceiling make a 90° angle between them.



!

Wall and ceiling surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry. Please ensure that the ceiling where you are going to install the panels is prepared to support their weight and is in good condition. Also ensure that you use screws and plugs that are suitable for the ceiling material and able to withstand the weight and loads applied.

Vicoustic will not take responsibility for any mistakes / limitations occurring during installations or any damages resulting from falling panels.

i

Turn the Super Bass Extreme on its back and apply the silicone drops as indicated in the diagram.

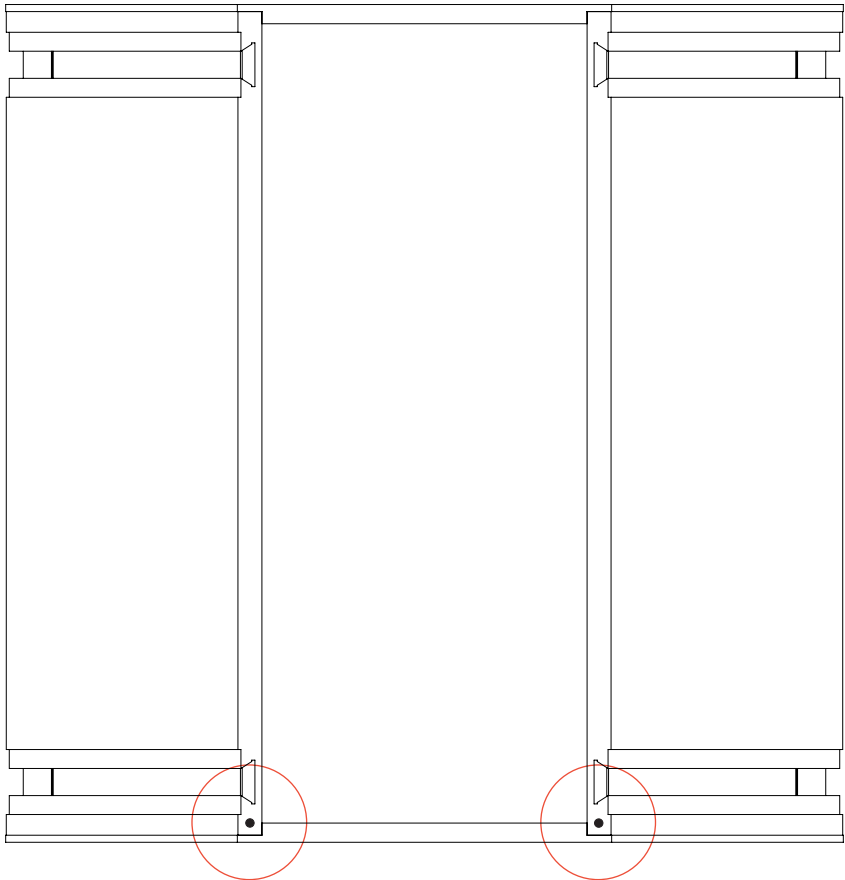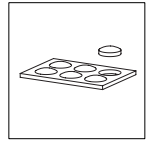

Main Office, R&D & Logistics

Rua do Pólo 3, nº 151
4590-001 Carvalhosa

T (+351) 255 136 746

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal

T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com

V//COUSTIC
INNOVATIVE ACOUSTIC SOLUTIONS

© Vicoustic, 2024 | V6

No parts of this document might be copied and/or published without written consent of Vicoustic.