



VicStrip Lite Square

Installation Manual

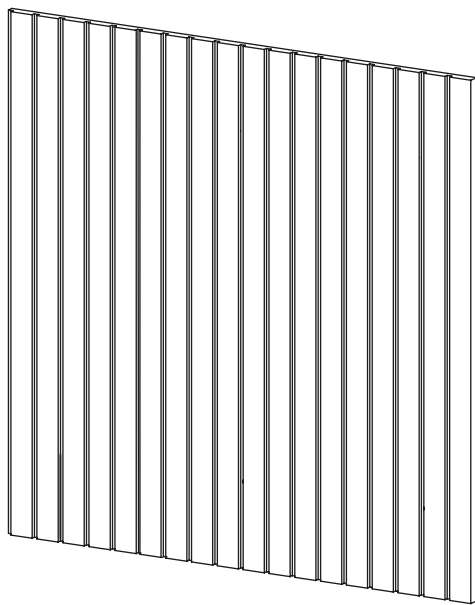


✓ MATERIAL NEEDED

Included

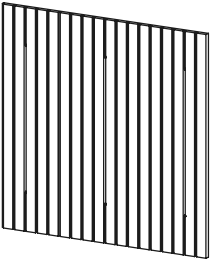


VicStrip Lite Panel

Not Included




Level



Flexi Glue Ultra



Hole saw






Box cutter



Measuring Tape

1


Before installing the panels, measure the wall where you are going to apply them. If necessary, make the necessary cuts to ensure a proper installation. The cuts can be done as indicated below.

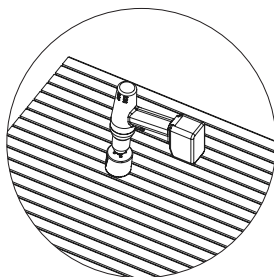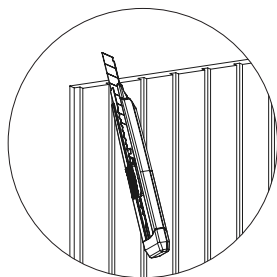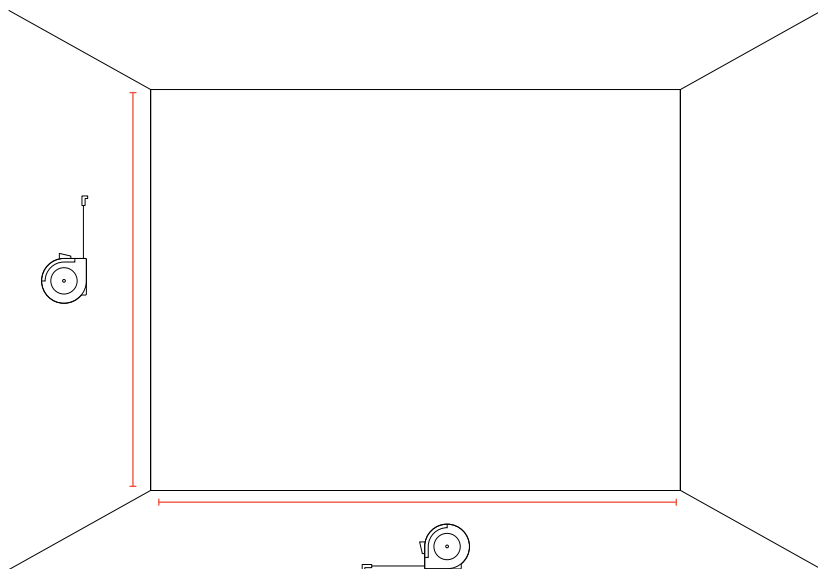

- Longitudinal cut following the PET groove, with the help of a box cutter.
- Transversal cut with the help of ruler and box cutter.
- Round hole with the help of a hole saw.


Wall Installation

For application on walls or ceilings, it is recommended to use Flexi Glue Ultra (not included). Apply the glue on the back of the acoustic panel, according to the diagram. Place the panel on the suitably chosen position on the wall. Once in the desired place, press it firmly against the wall.




If the nozzle is not already cut, cut it according to the diagram.

1

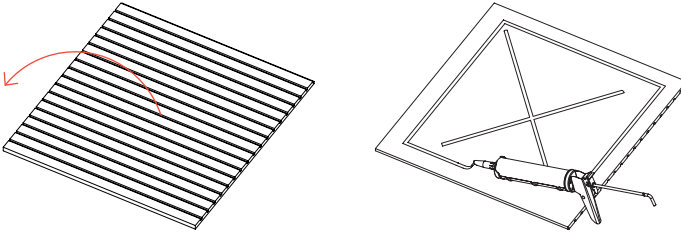

2

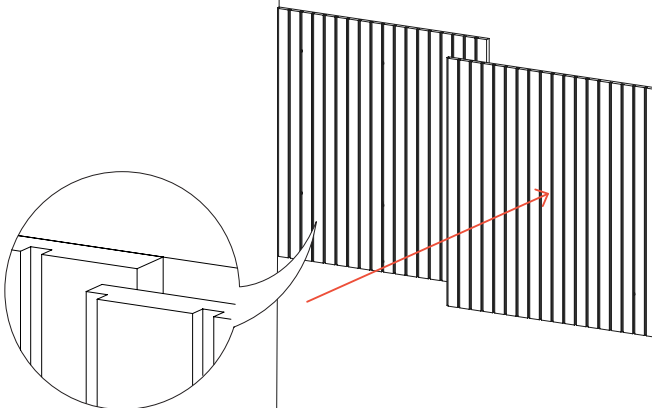

Use the same process to install the panels on the ceiling.

You may need to use ceiling supports to hold the panels in place while the glue dries.



To ensure that you maximise the strength of the glue, don't make any adjustments or remove the panel after bonding.



Do not apply VicStrip Lite Square behind radiators or too close to a heat source.

Wall and ceiling surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry. If you have unpainted gypsum board surfaces, these should be primed with a drywall primer (or another material manufactured especially for the purpose), to equalize the absorption between the gypsum board face paper, joint compound, and skin coating materials. You should then apply the paint, and allow air circulation in order to dry the paint within the time frame specified by the paint manufacturer. Please ensure the paint is dry before installing the acoustic panel. Make sure the room has all the necessary conditions to receive the acoustic panels. After you apply the glue on the back of each acoustic panel, please ensure you hold the acoustic panel against the wall the required time (mentioned above), and ensure it stays fixed in place. This method is also applicable to ceiling installations.

Important notes: Always apply the glue in stripes. Do not apply the glue in dots. When applying the glue, position the nozzle tip pre-cutted at 45° angle, so that it applies some pressure on the glue against the back of the panel.

For ceiling panel installations, you may need to use ceiling supports to hold the panels in place while the glue dries.

HQ – Factory and Office

Rua do Polo 3, Nr. 151 – Freamunde
4590-335 Paços de Ferreira, Portugal
Tel: +351 255 070 044

Info and Sales

E sales@vicoustic.com

www.vicoustic.com

V//COUSTIC
INNOVATIVE ACOUSTIC SOLUTIONS

© Vicoustic, 2025 | V2

No parts of this document might be copied and/or published without written consent of Vicoustic.