




**UPGRADE YOUR SPACE**

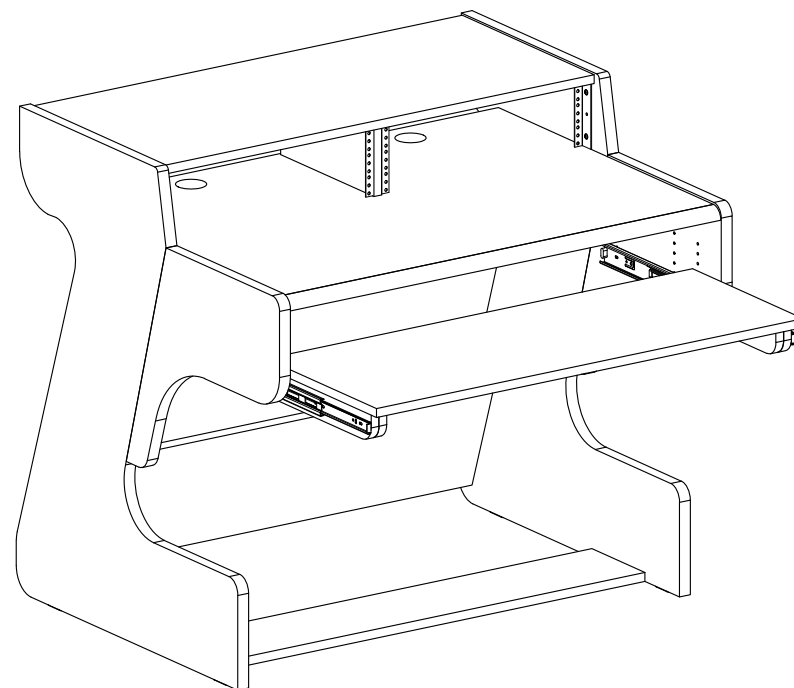


# Miza 49 Flex

## Assembly Manual

### Assembly Manual

Unpack the parts carefully and set up so that you can see the part numbers clearly. In the big box you should find a small cardboard box with all the screws and bolts for assembly.

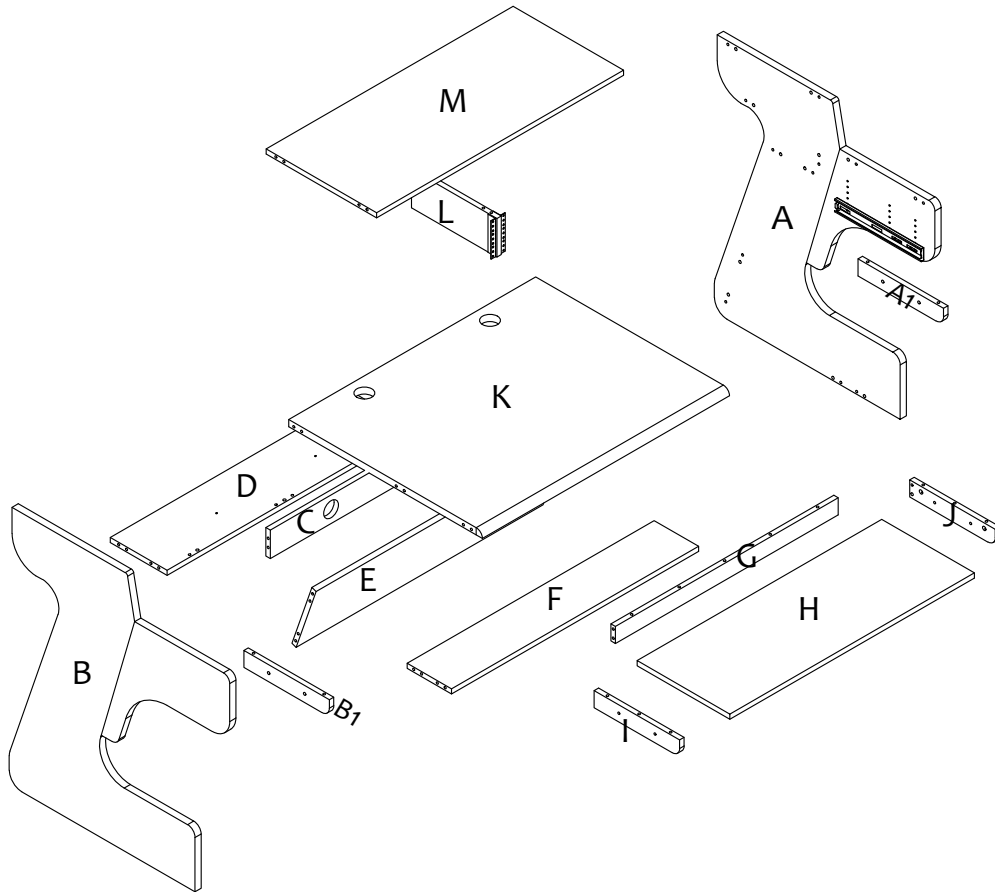

Here you have an exploded view of the whole desk and how it is supposed to come together. We use high quality furniture assembly components from renowned EU manufacturers. Please, never use force. These parts should come together easily, in case of doubt check the manual again or contact support.

### Assembly Manual

Thanks for choosing a piece of furniture from Zaor. Before you can enjoy the use of it you need to build it. We tried to put all the explanations necessary for a safe build, when in doubt please get in touch or check out our Youtube channel where we are putting more and more assembly videos to help you with this important task. Enjoy!

#### General technique for putting together Zaor desks




The assembly of your desk uses special kits. Here's how to use them

- 1) On the piece with the threaded insert(s), put in the system bolt(s) and tighten making sure to align the hole in the system bolt at a 90° angle.

Please note that the system bolt may have a little slack in this position, which is fine!



- 2) Ensure that the hole in the bolt aligns with the opening in the other piece to be able to put in the safety screw.

- 3) In each hole in the second piece, put in a cone shaped safety screw and tighten with a cross screw driver - without forcing. The 2 parts will now be safely attached.

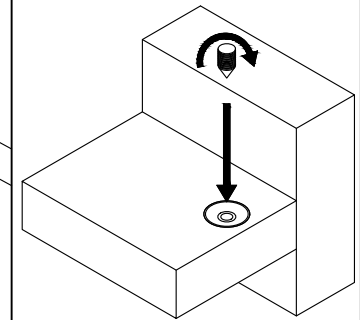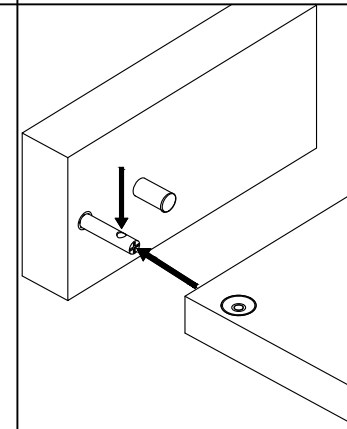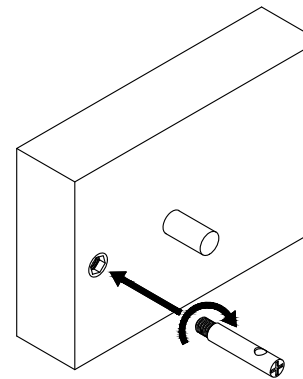

## Assembly Manual


### STEP 1

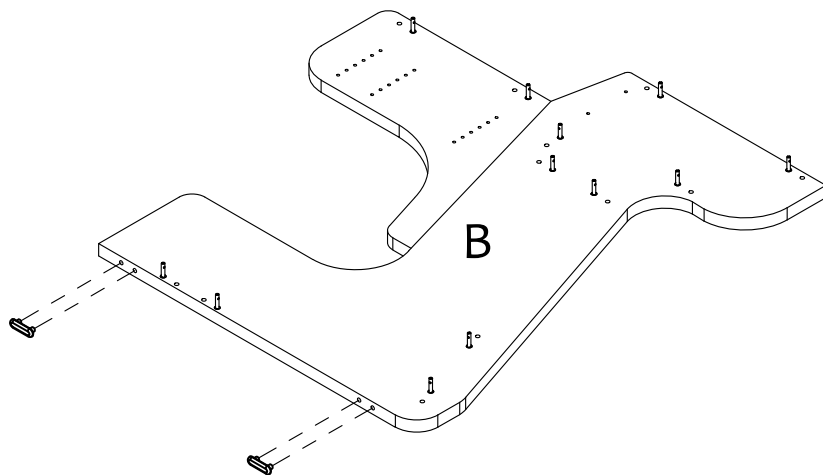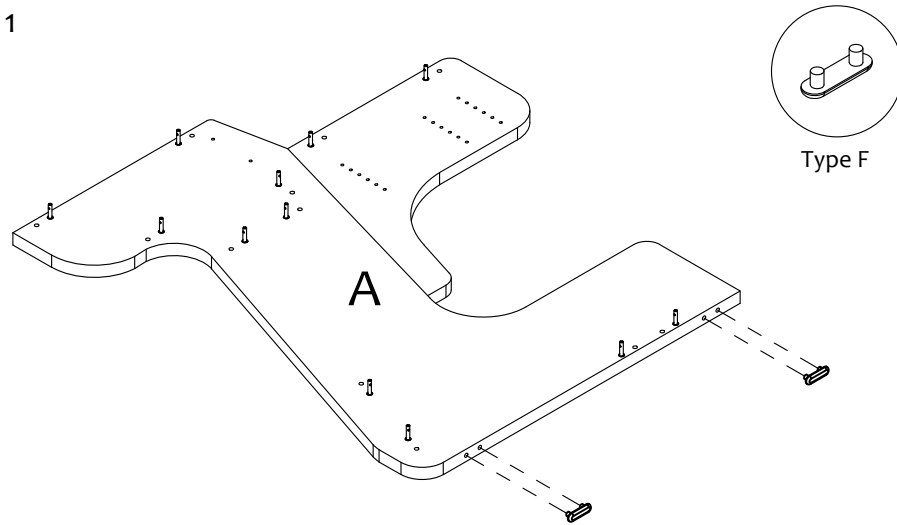


## Assembly Manual

### STEP 2


#### Left

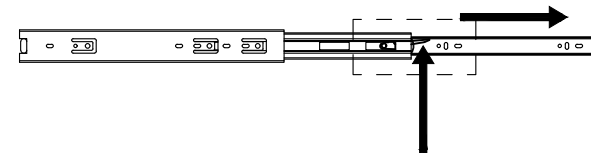

Slider 1 (L)




Slider 2 (L)

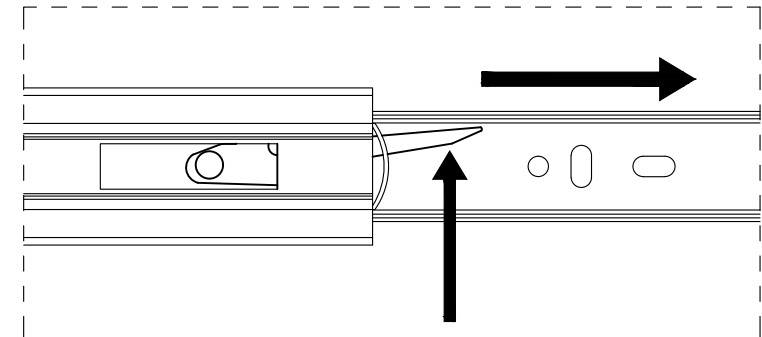

## Assembly Manual


### STEP 3

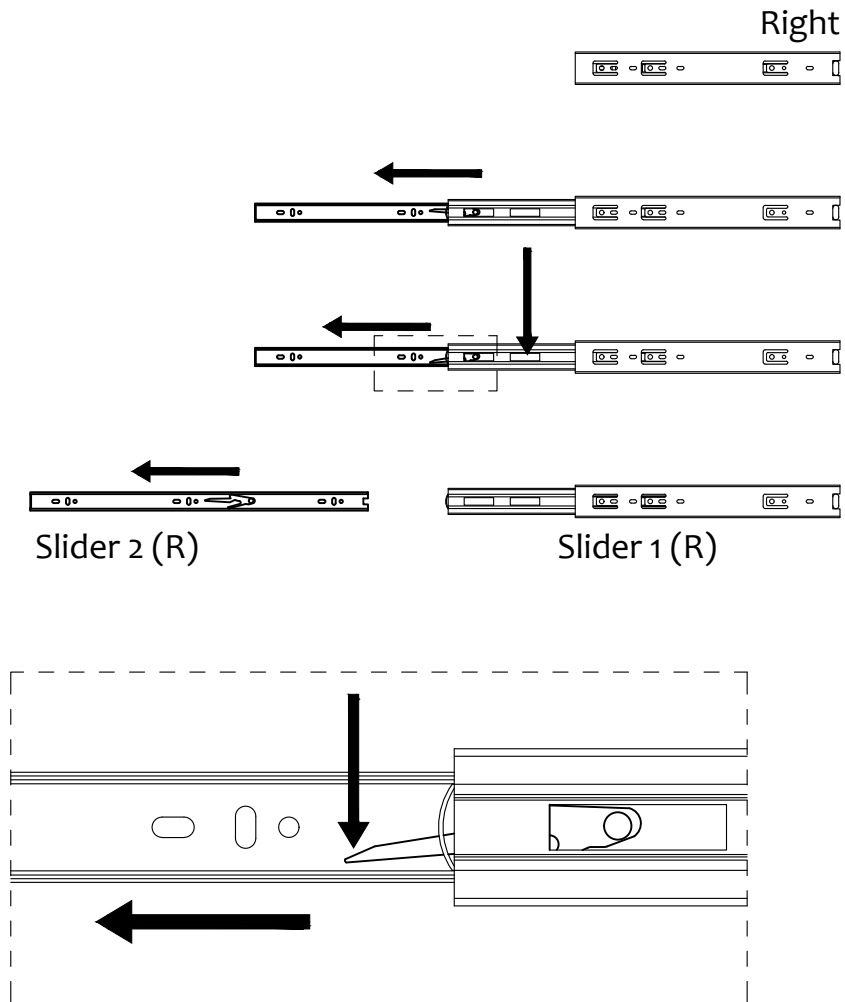


## Assembly Manual

### STEP 4

### Choose Height


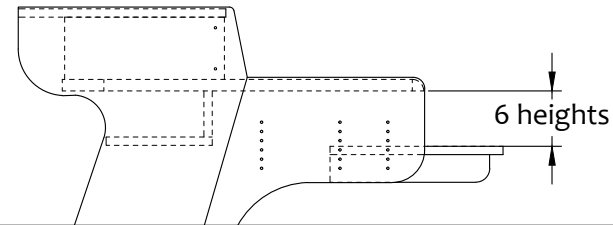


- 1st 20 mm
- 2nd 40 mm
- 3rd 60 mm
- 4th 80mm
- 5th 100 mm
- 6th 120 mm

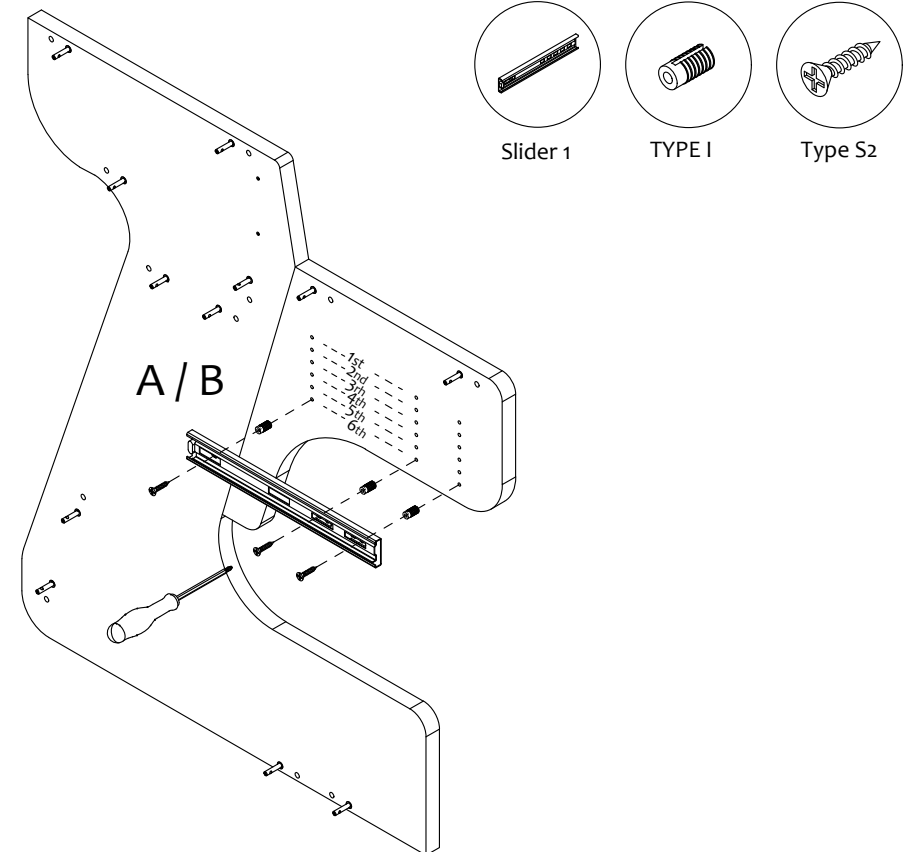

## Assembly Manual



### STEP 5

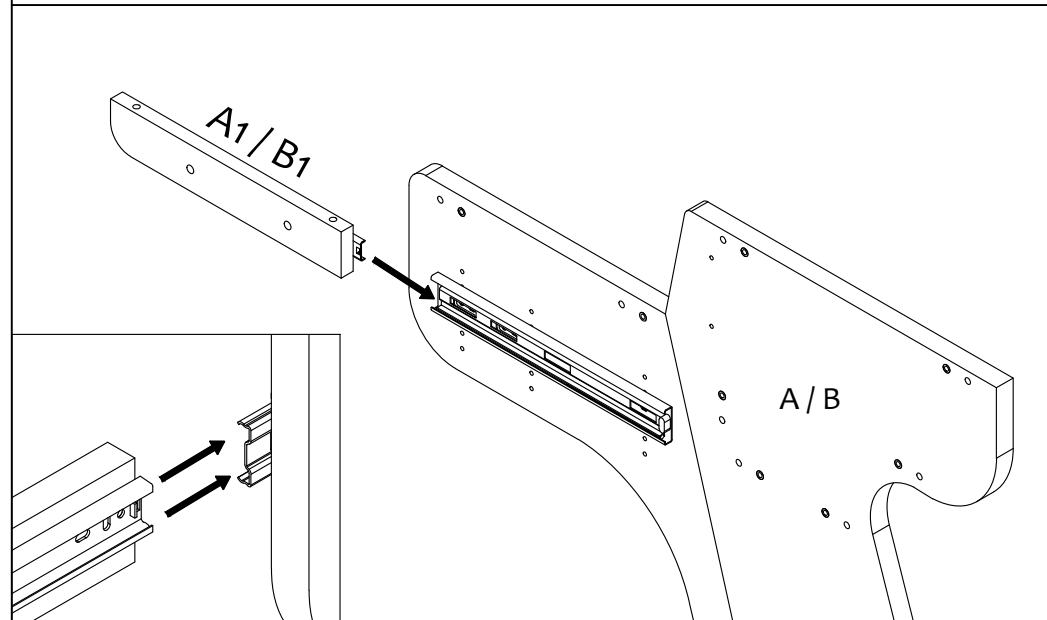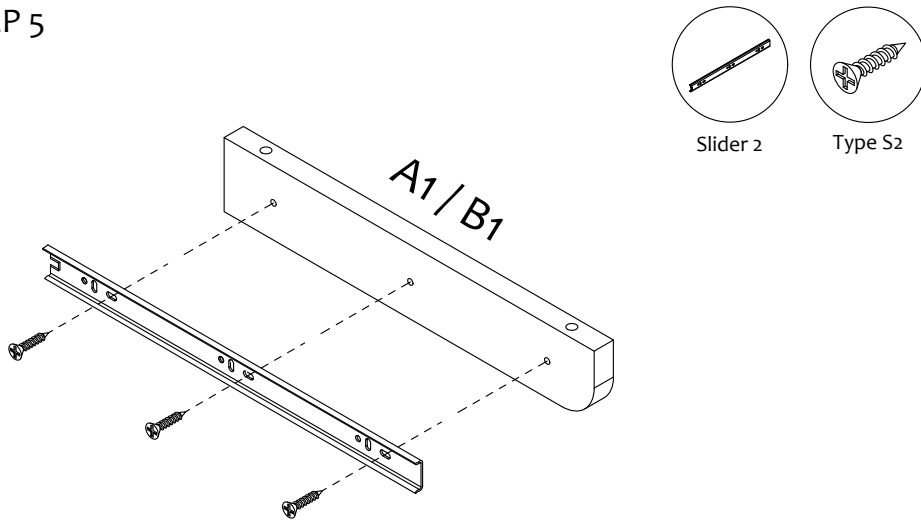



## Assembly Manual

### STEP 6



Push wooden dowels type W in the appropriate holes

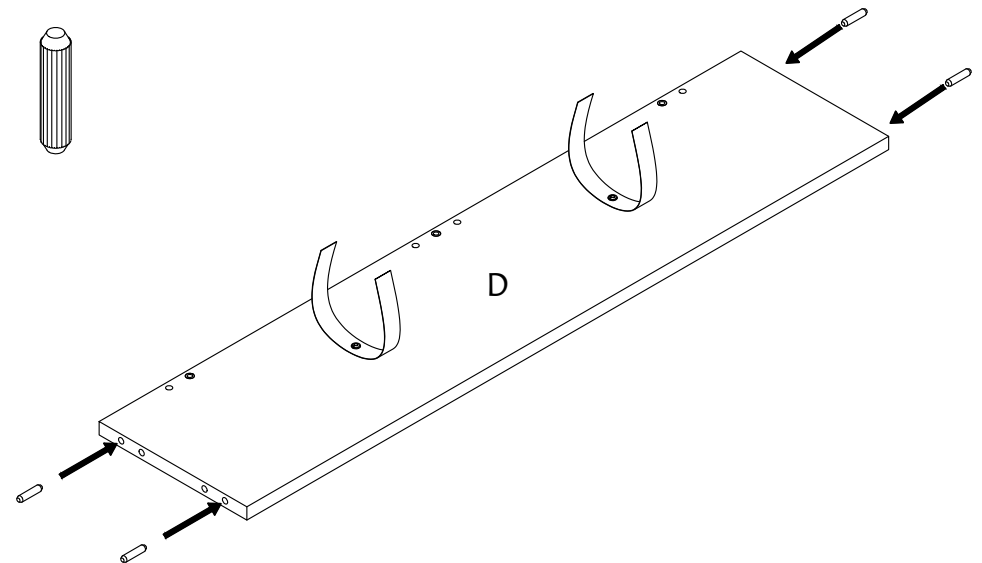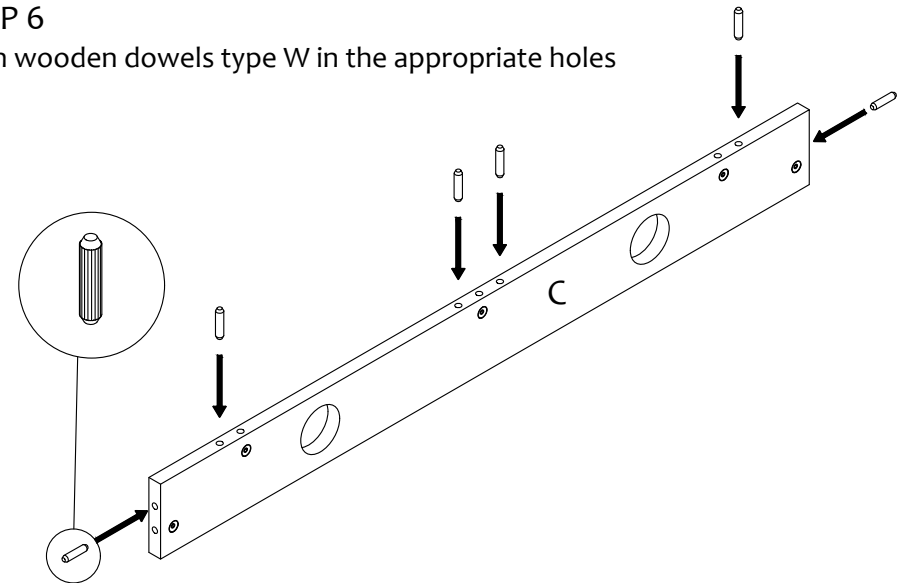



## Assembly Manual

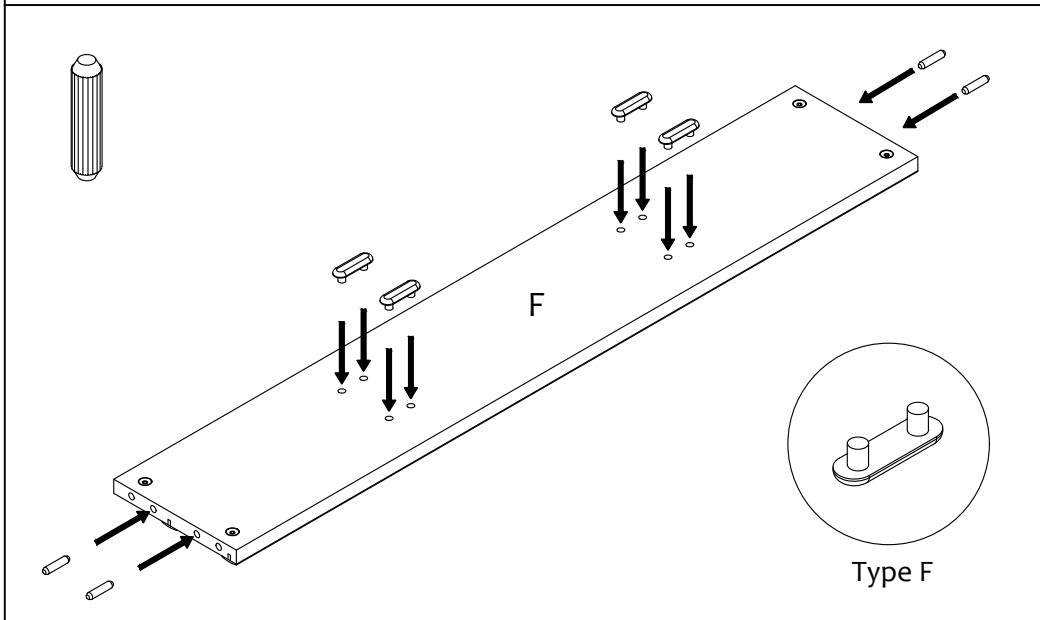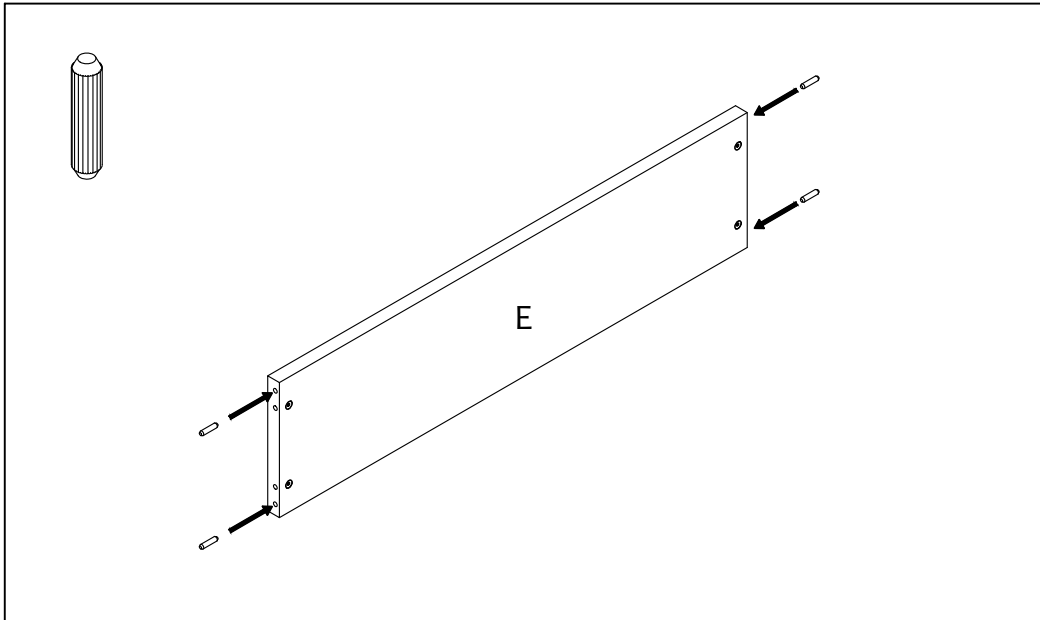


## Assembly Manual

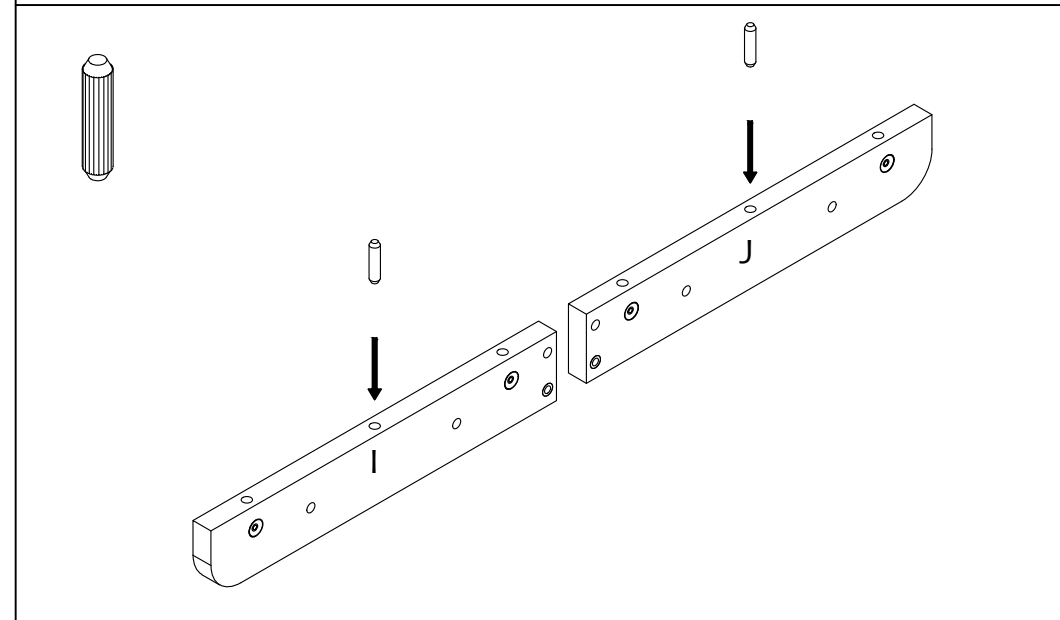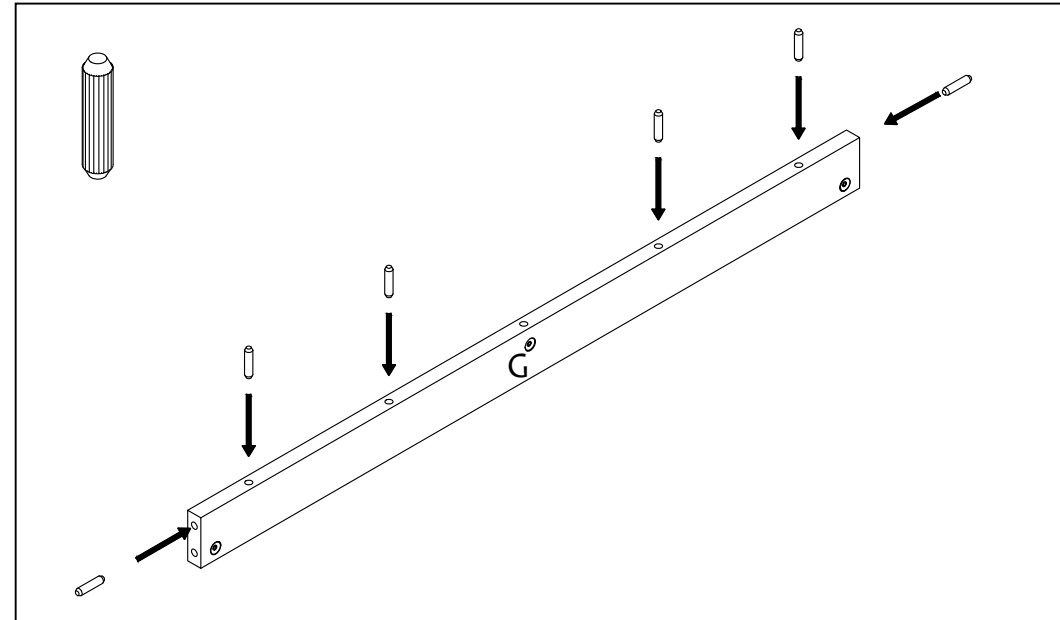

## Assembly Manual

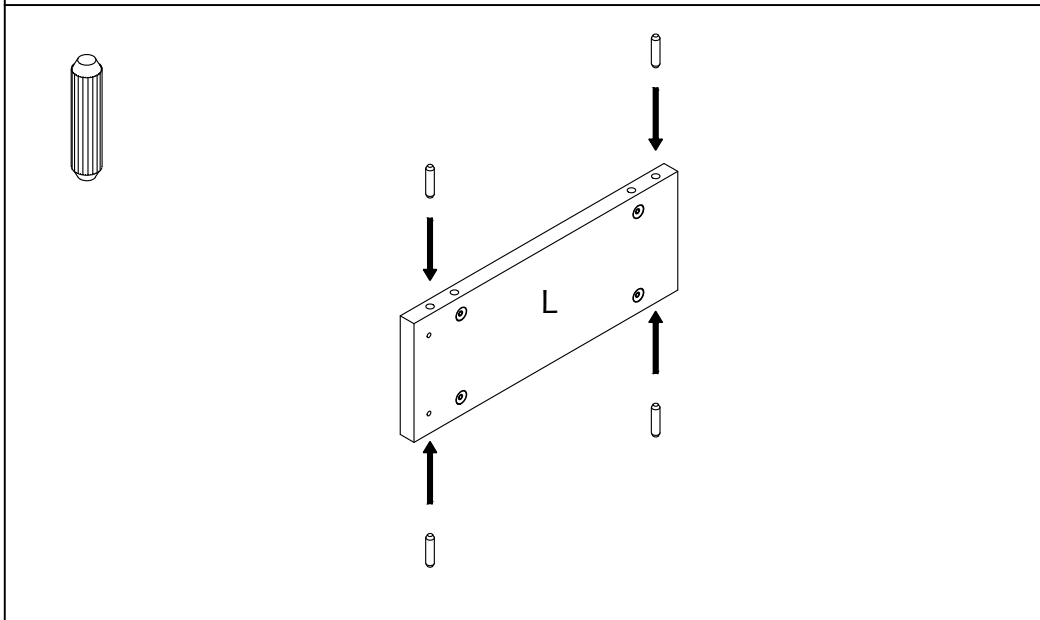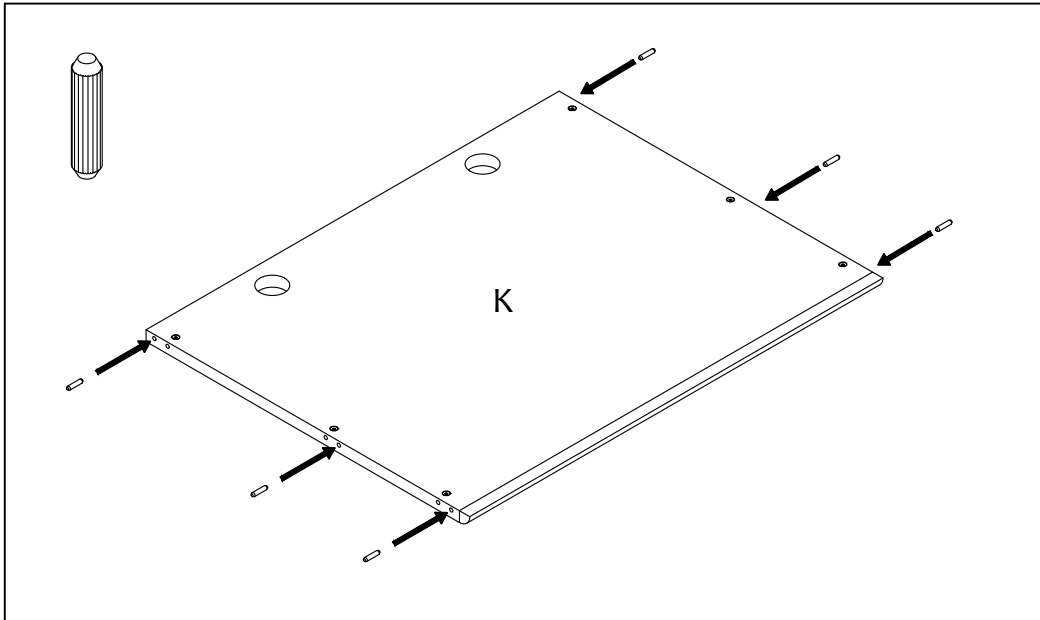


## Assembly Manual

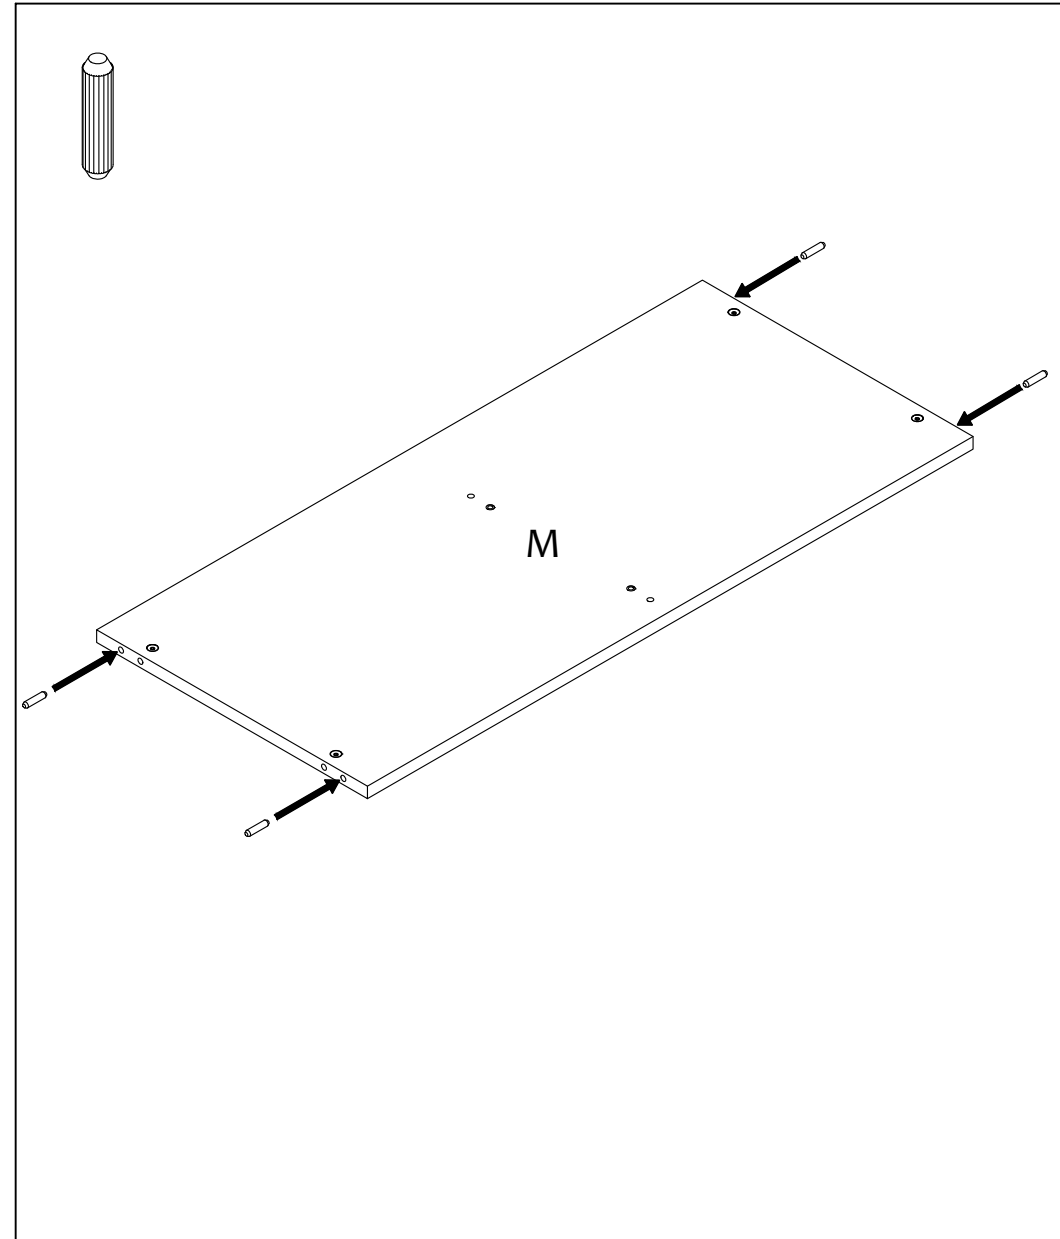


## Assembly Manual

### STEP 7

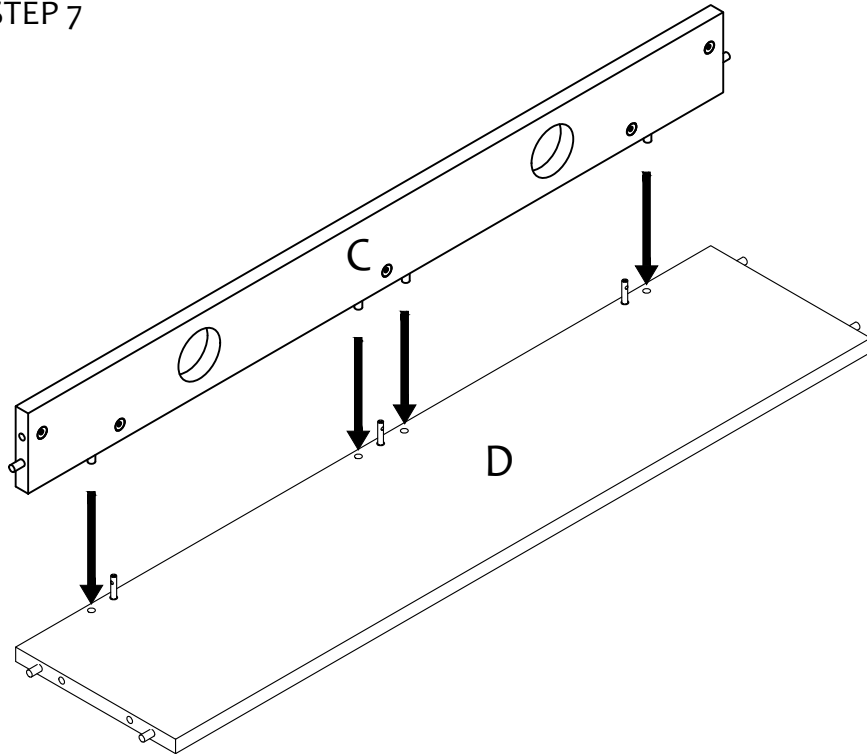



Join panels C and D. Attach, using the system bolts that you mount on the threaded inserts in panel n°C. Adjust so they are pointing such that holes can be seen when inserted into panel n°D (no need to tighten them). Use the small slanted screws to tighten the connection between the two panels. Proceed likewise for the other connections.

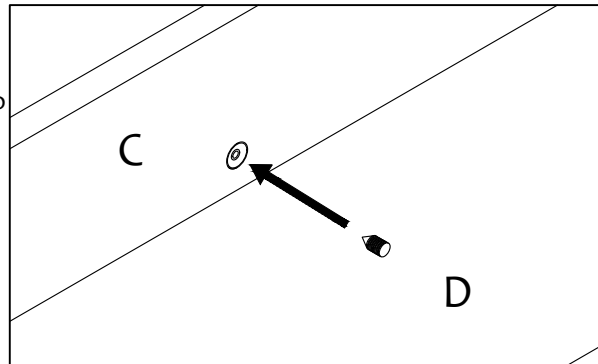

## Assembly Manual


### STEP 8

Use screws Type Rb

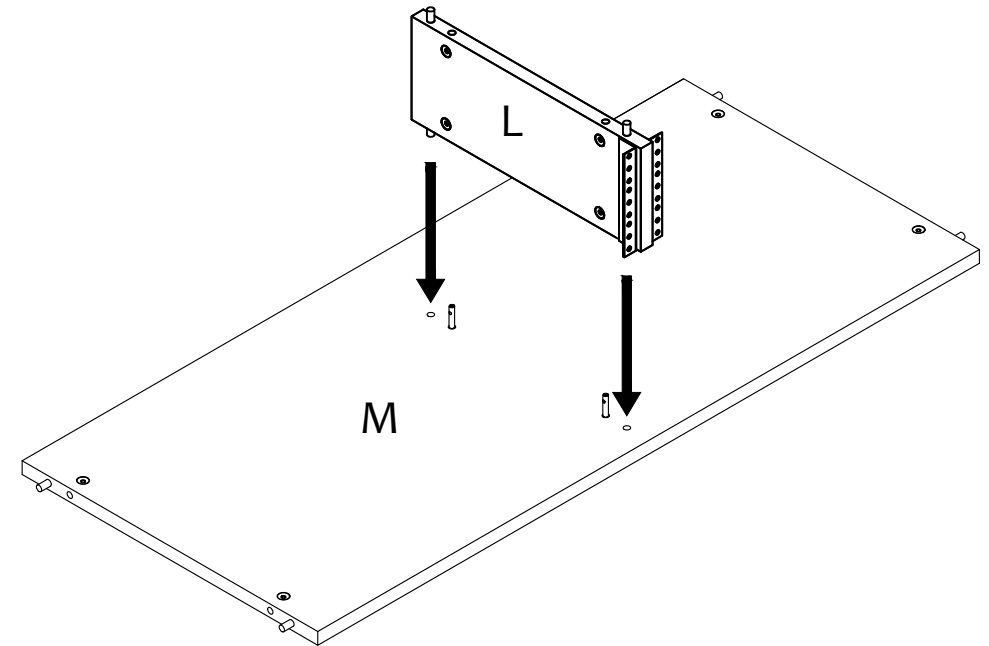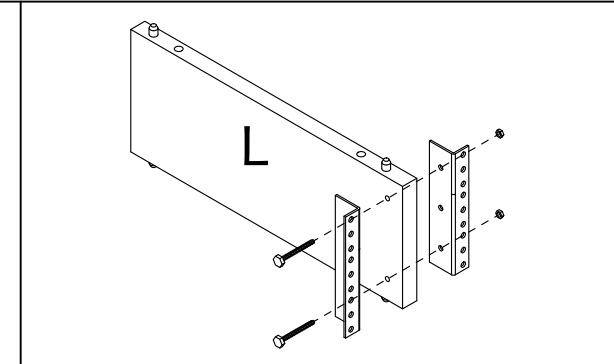


## Assembly Manual

### STEP 9

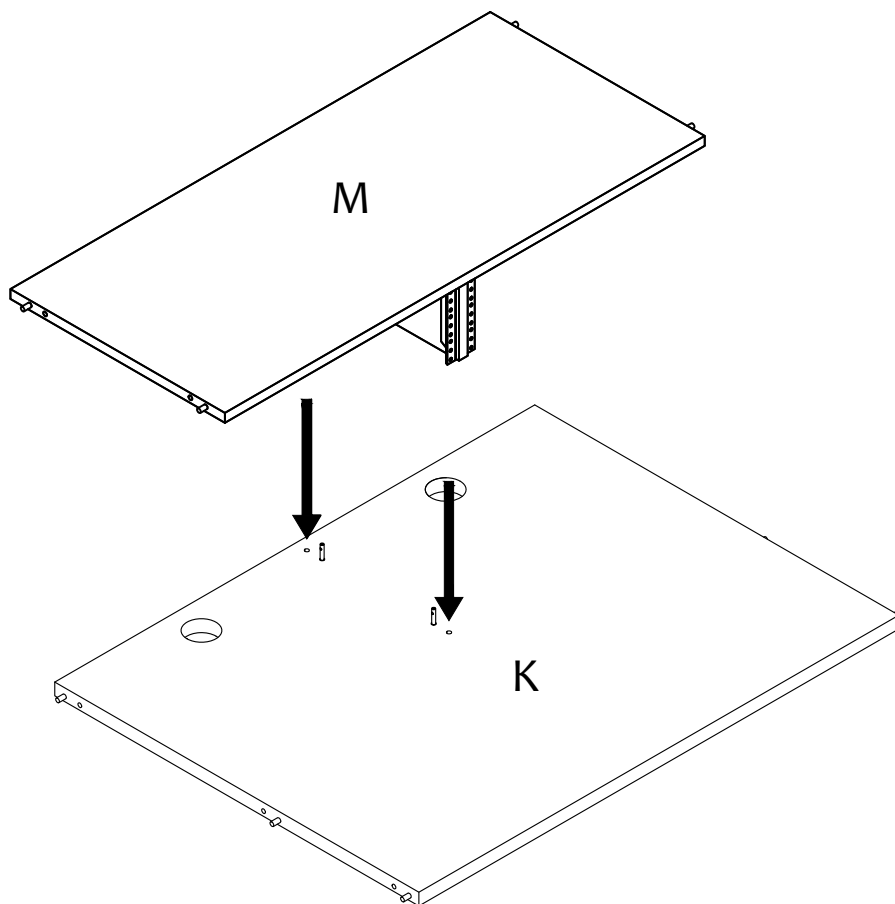


## Assembly Manual

### STEP 10

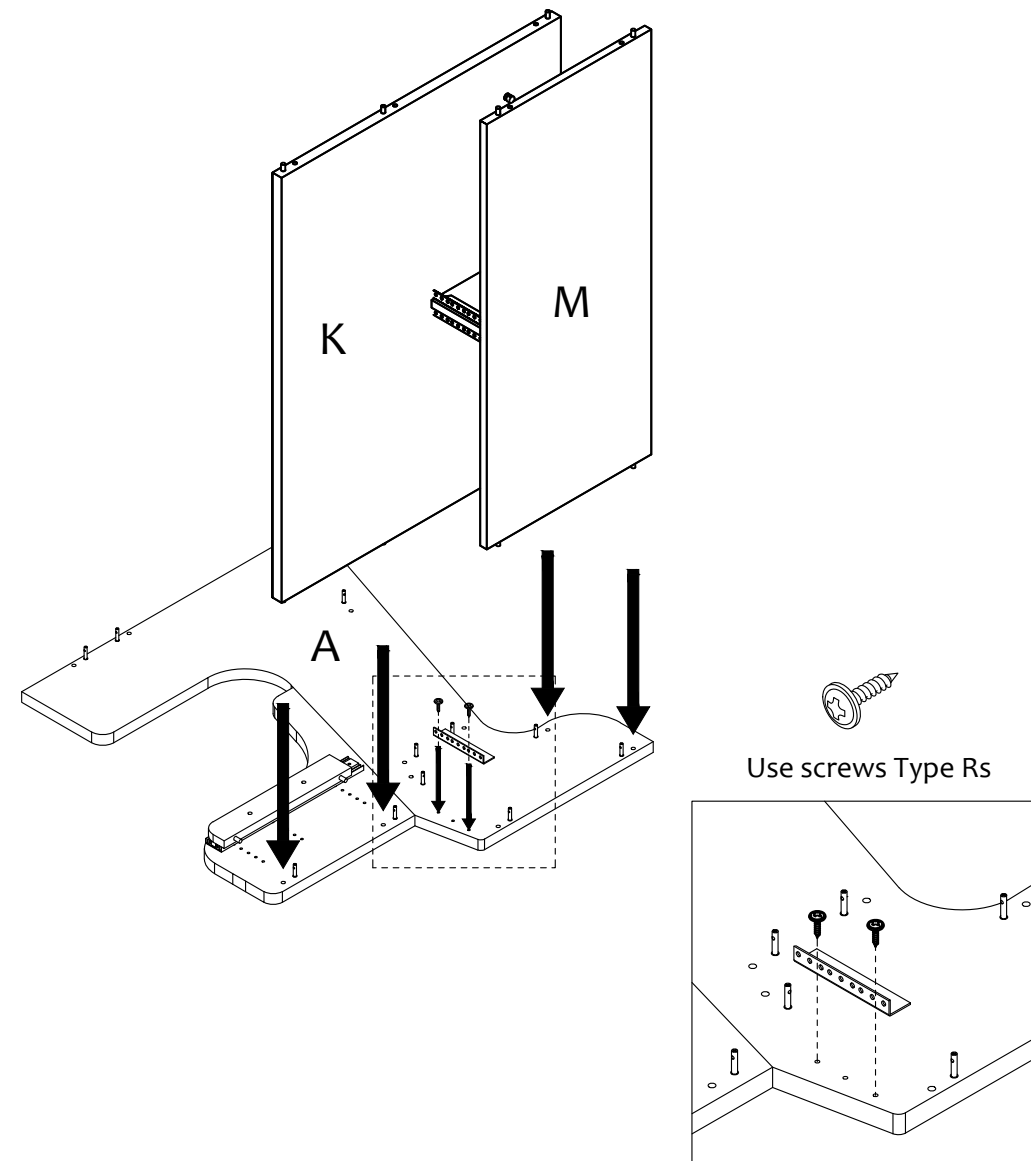


## Assembly Manual

### STEP 11

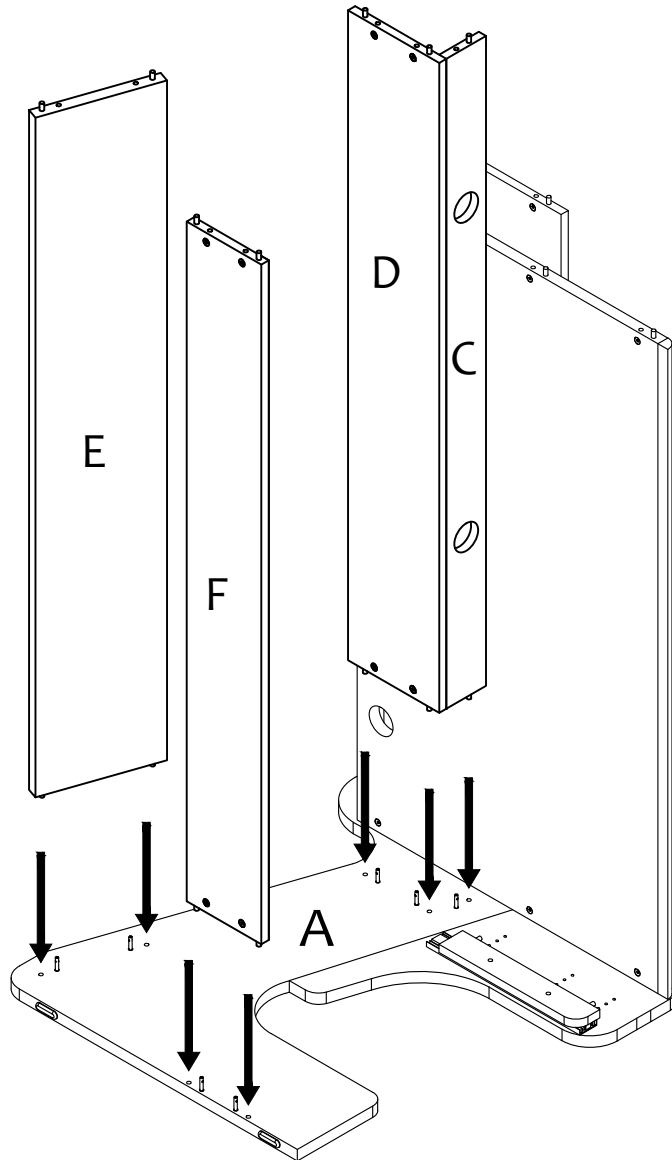


## Assembly Manual

### STEP 12

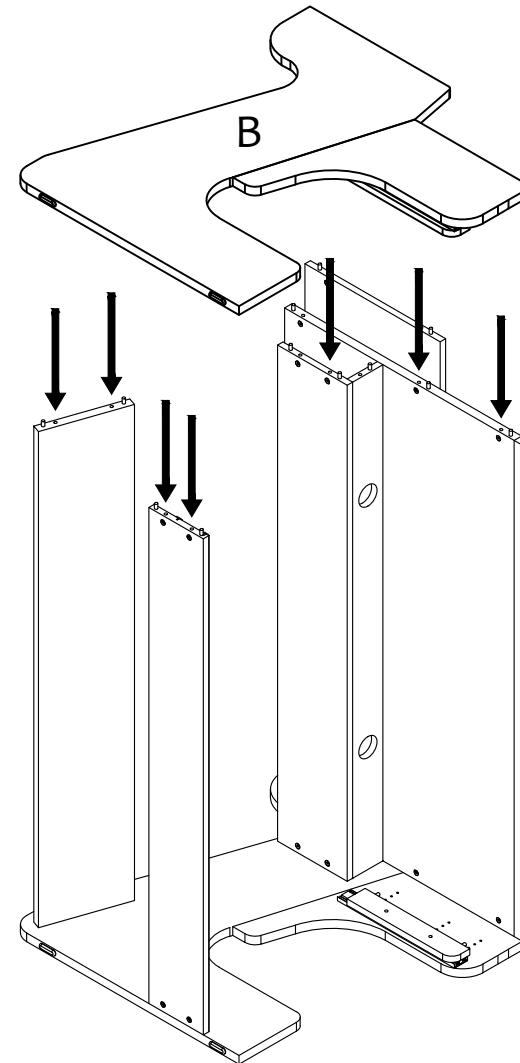


Use screws Type Rs

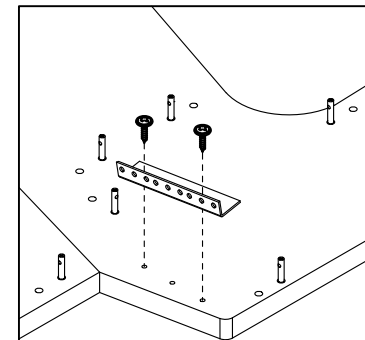


## Assembly Manual

### STEP 13

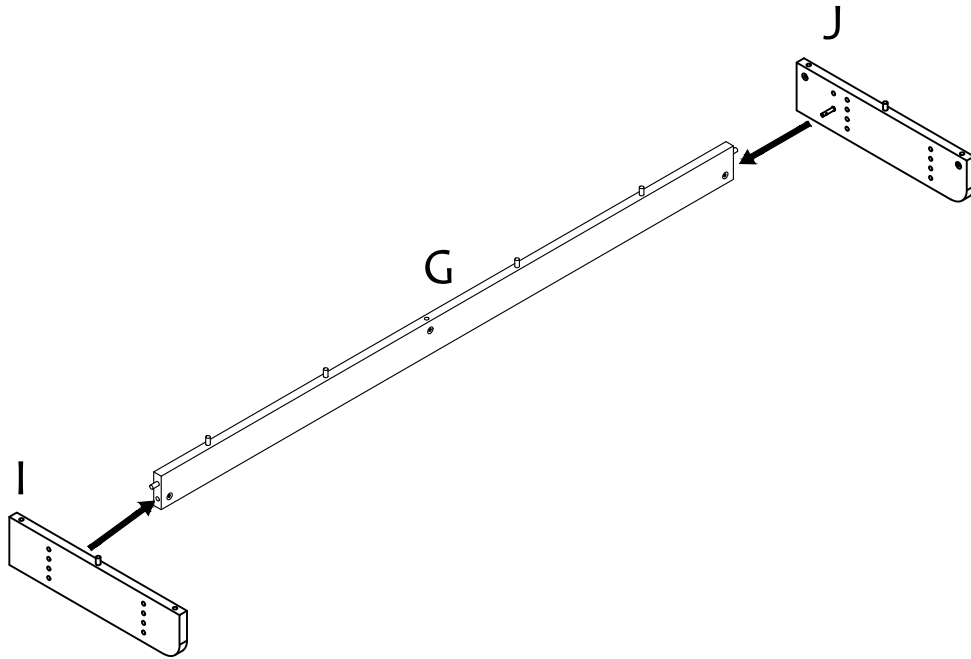


## Assembly Manual

### STEP 14

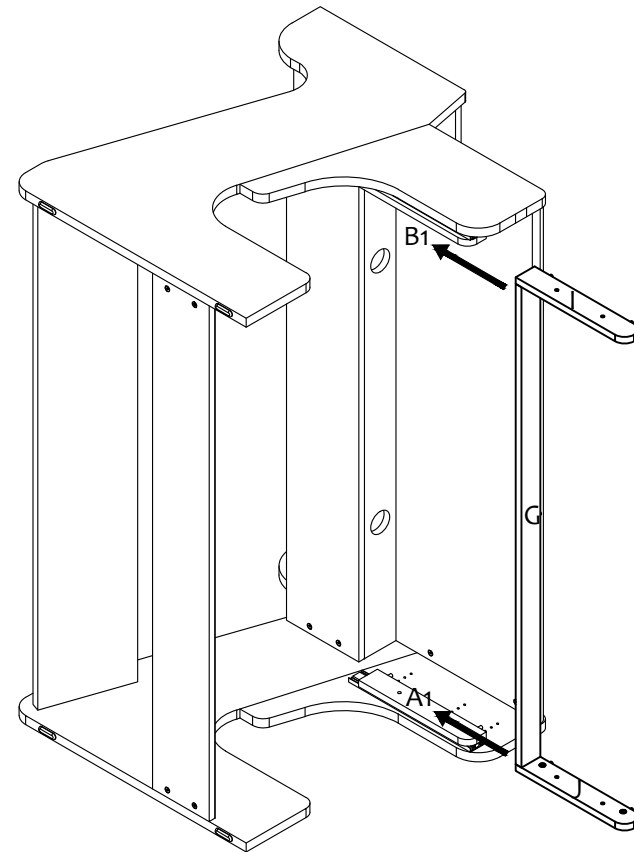


Use screws Type K

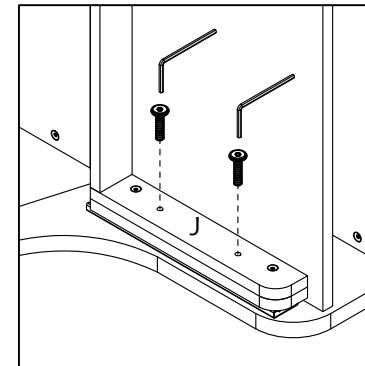

## Assembly Manual


### STEP 15

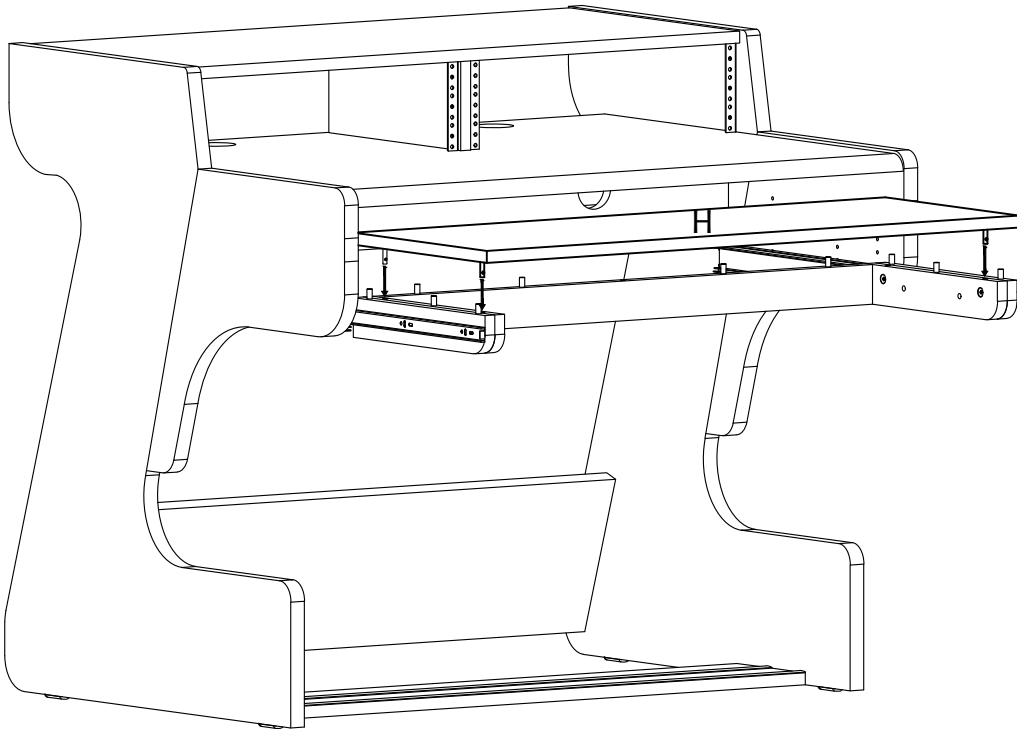

## Assembly Manual

### PACKING LIST:


x38



Assembly Kits

x44


Type **W**

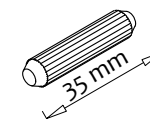

Wooden dowels

x04


Type **K**



m6x30 mm

x8

Type **F**



Plastic foot

x36


Type **I**



Plastic insert

x02

Type **SL**

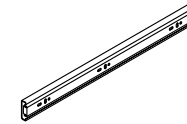

Sliders 35mm

x12


Type **S2**



3.5X16 mm

x1


Type **H**



Hex wrench

x4

Type **R**



Rack rail

x04


Type **Rs**



Rack rail screws

x2


Type **Rb**



Rack bolt screws





x24

Type **Ru**



Rack units screws

### TOOLS:

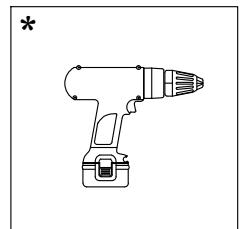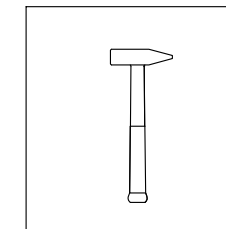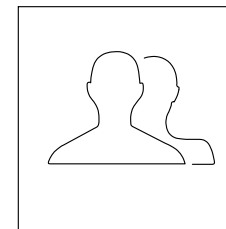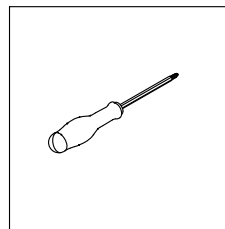

\*Suggested